

BobTail Tooling Selection ChartRev: 07/12/10

	Diameter	3/16"		1/4"		5/16"		3/8"		10mm		12mm		1/2"	
		Install	Cutter	Install	Cutter	Install	Cutter	Install	Cutter	Install	Cutter	Install	Cutter	Install	Cutter
A	244BT	99-7921	-----	99-7922	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
B	2480	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
C	256BT	-----	-----	-----	-----	99-7923	-----	99-7924	-----	99-7903	-----	-----	-----	-----	-----
D	2503	-----	-----	-----	-----	99-7923	-----	99-7924	-----	99-7903	-----	-----	-----	-----	-----
E	SFBTT20 Series	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	99-7880	99-7880CC	99-7882	99-7882CC
F	BTT25 Series	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	99-7850	99-7850CC	99-7855	99-7855CC
G	BTT35 Series	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
H	BTT35LS	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	99-7820	99-7820CC	99-7825	99-7825CC
I	BTT57 Series	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
J	2620	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	99-7840	99-7840CC	99-7845	99-7845CC
K	2624	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
L	2628	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	99-7835	99-7835CC

Diameter	14mm		16mm		5/8"		3/4"		20mm		7/8"		1"	
	Install	Cutter	Install	Cutter	Install	Cutter	Install	Cutter	Install	Cutter	Install	Cutter	Install	Cutter
244BT	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
2480	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
2480	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
2503	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
SFBTT20 Series	99-7884	99-7884CC	99-7881	99-7881CC	99-7881	99-7881CC	-----	-----	-----	-----	-----	-----	-----	-----
BTT25 Series	99-7854	99-7854CC	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
BTT35 Series	-----	-----	99-7851	99-7851CC	99-7851	99-7851CC	-----	-----	-----	-----	-----	-----	-----	-----
BTT35LS	99-7824	99-7824CC	99-7821	99-7821CC	99-7821	99-7821CC	99-7826	99-7826CC	99-7822	99-7822CC	-----	-----	-----	-----
BTT57 Series	-----	-----	-----	-----	-----	-----	99-7856	99-7856CC	99-7852	99-7852CC	99-7853	99-7853CC	99-7857	-----
2620	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
2624	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
2628	-----	-----	99-7831	99-7831CC	99-7831	99-7831CC	99-7836	99-7836CC	-----	-----	-----	-----	-----	-----

Rigs

918
940
969 (Air)

Kits

BTRAPID-16	Includes:	BTT35LS-16 - Tool 99-7821 - (5/8 - 16mm Bobtail) 969 - Air Powerig 129336-2 - Selector Valve (Set for Bobtail)
BTRAPID-20	Includes:	BTT35LS-16 - Tool 99-7822 - (20mm Bobtail) 969 - Air Powerig 129336-2 - Selector Valve (Set for Bobtail)

Accessory and Misc.

128441-3 Tool Controller - Used with the Following Tools:

Rev: 07/12/10

BTT25
BTT35
BTT57
SFBTT20-IT

128415 - Relief Valve for Controller Tools
128904 - Relief Valve without Transmitter (Optionally Used with Non Controller Tools)
129336-1 - Selector Valve with Hoses (No preset Pressure)
129336-2 - Selector Valve with Hoses (Pressure preset for Bobtail)
129174 - Selector Valve Kit for 940 rig (No preset Pressure Set)
128457-XX - Cable Assembly (Pressure Transmitter)
125926-XX - Hose Assembly for Controller Tools
118308 -XX - Two wire Control Cord - For Controller Tool
128418-XX - Controller cord
128459 - Adapter Control Cable (Adapts BTT25, 35, 57 & SFBTT20-IT to Simple Tool
128418-XX - Controller Cord Extension