


Hydro-pneumatic blind rivet setting tools

TAURUS® 1-4

Exploded drawing based on TAURUS® 2.
Specifications of other models in the boxes.

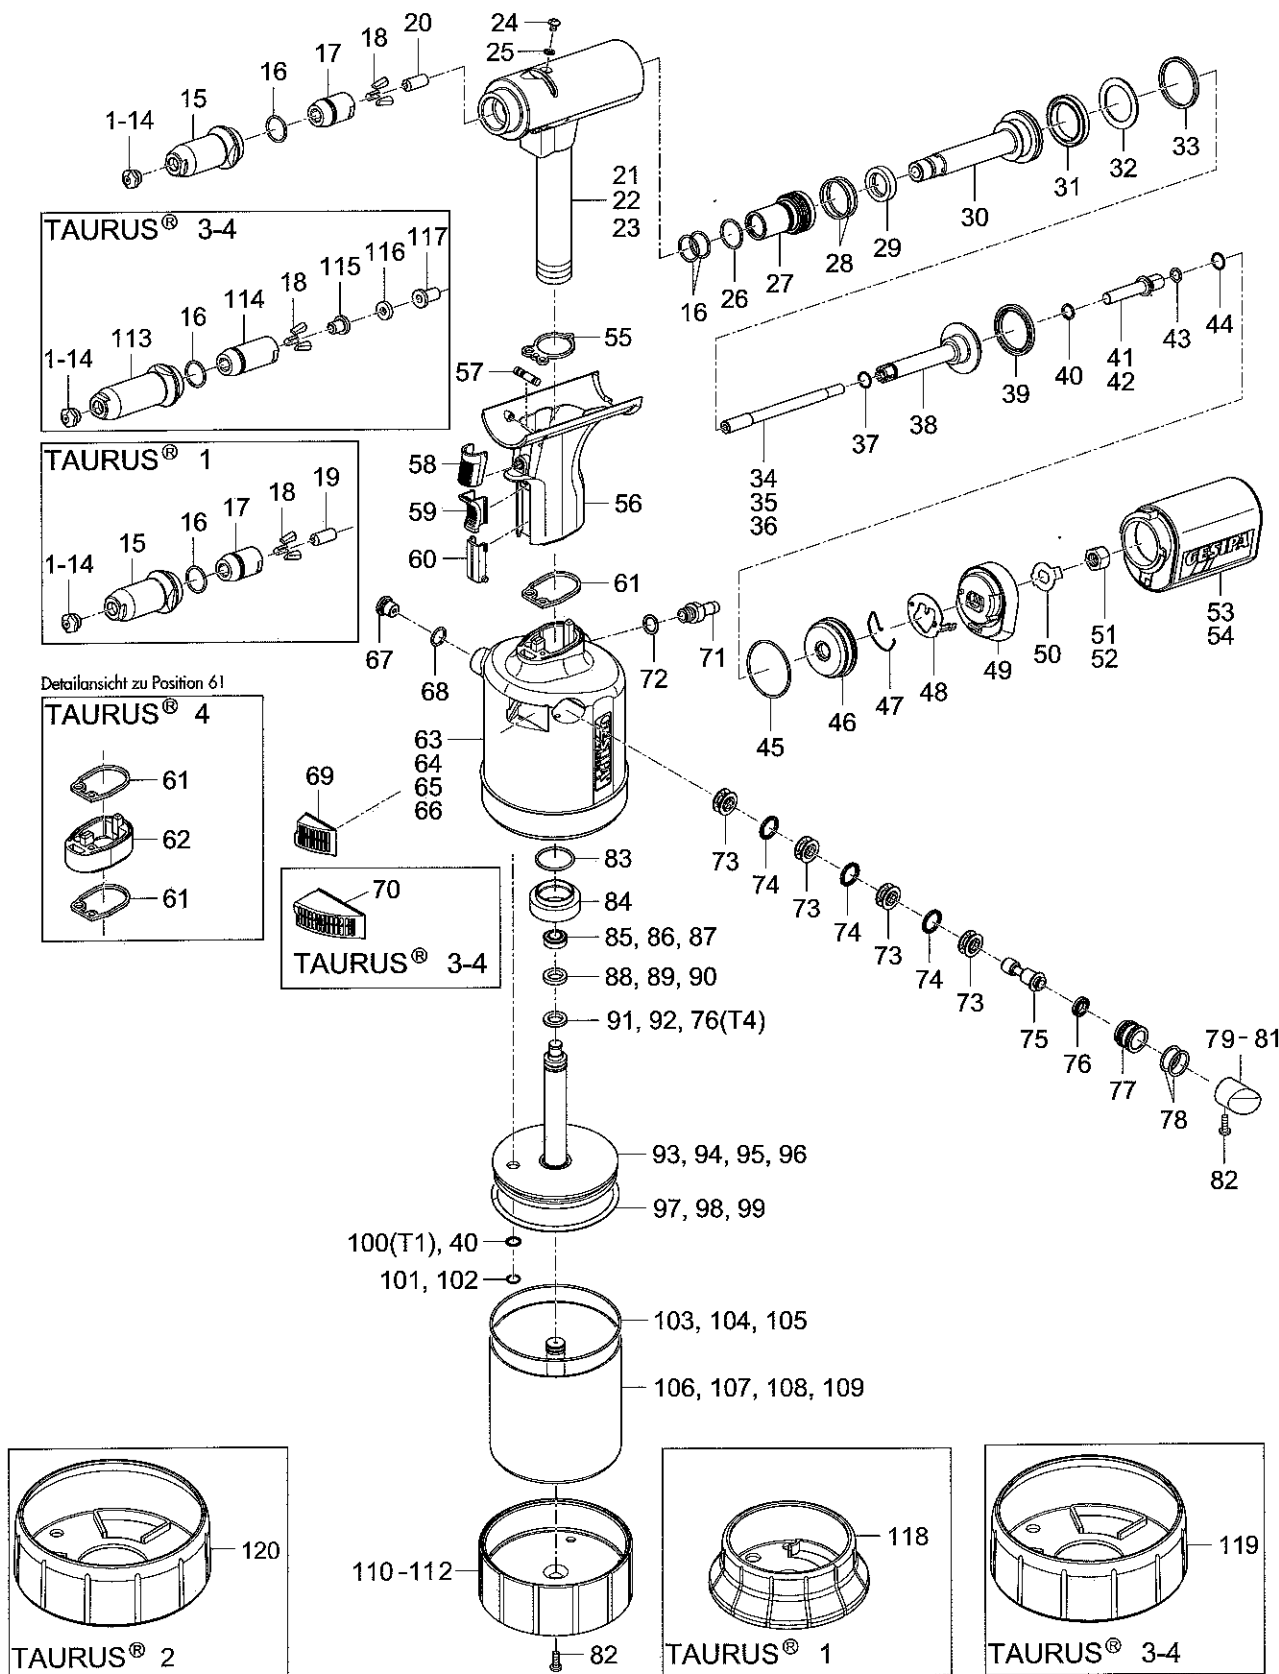

Hydro-pneumatic blind rivet setting tools

TAURUS® 1-4

You will find spare part kits for TAURUS® 1-4 on page 316 - 318.

Spare part no.	TAURUS®-Type	Article no.	Designation
1 •	T1	725 2075	Nosepiece 17/18
2 •		725 2269	Nosepiece 17/20
3 •		725 5077	Nosepiece 17/22
4 •	T2	725 1583	Nosepiece 17/24
5 •		725 2040	Nosepiece 17/27
6 •		725 2059	Nosepiece 17/29
7 •	T3, T4	725 2067	Nosepiece 17/32
8 •		725 2083	Nosepiece 17/36
9 •		725 2560	Nosepiece 17/40
10 •	T1, T2	724 3065	Nosepiece 17/45
11 •		725 2202	Nosepiece 17/26 BT*
12 •		725 2210	Nosepiece 17/32 BT*
13 •	T1, T2	725 2229	Nosepiece 17/42 BT*
14 •		725 2237	Nosepiece 17/48 BT*
15 •		756 1202	Steel head sleeve
16 •	T1, T2	756 1199	O-ring
17 •		756 1180	Jaw housing
18 •		756 1172	Jaws (3-part)
19 •	T1	756 1164	Jaw pusher 1
20 •		757 1046	Jaw pusher 2
21 •		756 2047	Tool head 1, assembled
22 •	T2, T3	757 1232	Tool head 2, assembled
23 •		759 1002	Tool head 4, assembled
24 •		756 1229	Oil screw plug
25 •	T1	756 1261	Sealing ring M4
26 •		756 1342	O-ring
27 •		756 2055	Seal holder, complete
28 •	T1	715 8688	O-ring
29 •		756 1369	Rod seal
30 •		756 1377	Draw bar
31 •	T1	756 1385	Piston seal
32 •		756 1034	Supporting ring
33 •		756 1031	Piston seal
34 •	T1	756 1156	Nozzle tube 1
35 •		757 1020	Nozzle tube 2, long
36 •		758 1043	Nozzle tube 3, long
37 •	T1	756 1997	O-ring
38 •		756 2063	Resetting piston, complete
39 •		756 1393	Piston seal
40 •	T1	756 1431	Rod seal
41 •		757 1352	Connecting piece 1
42 •		757 1021	Connecting piece 2/3
43 •	T1	756 1083	O-ring
44 •		770 2426	Snap ring
45 •		756 1091	O-ring
46 •	T1	756 1113	End cap
47 •		756 1865	Retaining spring
48 •		756 1857	Retainer
49 •	T1	756 1849	Adapter
50 •		757 1224	Lock washer
51 •		757 1349	Connecting piece nut 1
52 •	T1	757 1022	Connecting piece nut 2/3
53 •		756 2020	Spent mandrel container, complete
54 •		758 1238	Spent mandrel container, complete
55 •	T1	756 1016	Flat gasket 1
56 •		756 2098	Grip, complete
57 •		756 2071	Distributing valve, complete
58 •	T1	756 1520	Activation button
59 •		756 1539	Slider
60 •		756 2160	Orifice

* Wearing parts / *** for PH 2000-Spent mandrel container

Spare part no.	TAURUS®-Type	Article no.	Designation
62	T4	759 1001	Grip extension
63	T1	756 2101	Air cylinder 1, complete
64	T2	757 1240	Air cylinder 2, complete
65	T3	758 1114	Air cylinder 3, complete
66	T4	759 1003	Air cylinder 4, complete
67		756 2136	Pressure relief valve, complete
68		756 1030	O-ring
69	T2	757 1348	Silencer 2, complete
70	T3, T4	758 1211	Silencer 3, complete
71		756 1938	Connecting nipple
72		756 1970	Sealing ring
73		756 1628	Spacer cage
74		756 1601	Rod seal
75		756 1660	Control piston
76 •		756 2012	Piston seal
77		756 1687	Piston housing
78		756 2209	O-ring
79	T1	756 1636	Stopper 1
80	T2	757 1070	Stopper 2
81	T3, T4	758 1068	Stopper 3
82		725 2032	Housing screw short
83		756 1032	O-ring
84		756 1040	Al nut
85 •	T1	756 1776	Piston seal
86 •	T2, T3	757 1216	Piston seal
87 •	T4	759 1014	Piston seal
88 •	T1	756 1768	Guide ring 1
89 •	T2, T3	757 1127	Guide ring 2
90 •	T4	759 1013	Guide ring 4
91 •	T1	756 1741	Piston seal
92 •	T2, T3	756 1989	Piston seal
93	T1	756 2144	Air piston 1, complete
94	T2	757 1267	Air piston 2, complete
95	T3	758 1130	Air piston 3, complete
96	T4	759 1005	Air piston 4, complete
97 •	T1	756 1806	O-ring
98 •	T2	757 1151	O-ring
99 •	T3, T4	758 1173	O-ring
100	T1	756 1784	Rod seal
101	T1	756 1792	Snap ring
102	T2, T3, T4	757 1143	V-profile ring
103	T1	756 2039	O-ring
104	T2	757 1194	O-ring
105	T3, T4	758 1157	O-ring
106	T1	756 2152	Cylinder 1, complete
107	T2	757 1275	Cylinder 2, complete
108	T3	758 1149	Cylinder 3, complete
109	T4	759 1006	Cylinder 4, complete
110	T1	756 1059	Bottom 1
111	T2	757 1011	Bottom 2
112	T3, T4	758 1017	Bottom 3
113	T3, T4	759 1010	Steel head sleeve 4
114 •	T3, T4	759 1009	Jaw housing 4
115 •	T3, T4	759 1007	Jaw pusher 4
116	T3, T4	759 1004	Damping ring 4
117	T3, T4	759 1008	Centre part 4
118	T1	773 1018	Rubber foot 1
119	T3, T4	758 1064	Rubber foot 3 - 4
120	T2	772 1342	Rubber foot 2
	T2, T3	757 1353	Jaw pusher changeover set
	T1	756 1104	Changeover set***
	T2, T3, T4	756 1107	Changeover set***
		715 8955	Hydraulic oil refill bottle, 100 ml

You will find spare part kits for TAURUS® 1-4 on page 316 - 318.