


Alcoa  
Fastening  
Systems



# *Instruction Manual*

# **2502 & A2502 SERIES**

## *HYDRAULIC INSTALLATION TOOL*

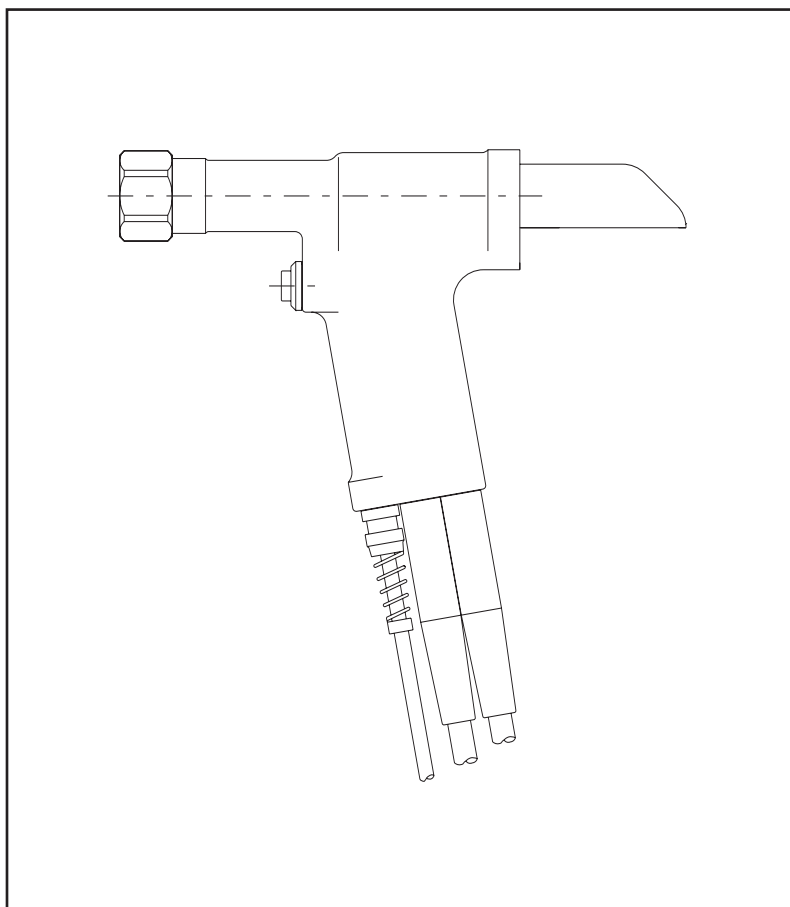

Makers of Huck®, Marson®, Recoil®  
Brand Fasteners, Tools & Accessories

03-10-2004  
Form HK 837



# EU Declaration of Conformity

**Manufacturer:**

Huck International Inc., Installation Systems Division, 85 Grand Street, Kingston, NY, 12401, USA

**Description:**

Model number 2400 series fastener installation tools

Model number 2500 series fastener installation tools

Model number 2600 series fastener installation tools

**Relevant provisions complied with:**

Council Directive related to Machinery, (89/392/EEC), (91/368/EEC), (93/44/EEC), (93/68/EEC)

Council Directive related to EMC/EMI, (89/336/EEC)

**European Representative:**

Rob Pattendon, Huck International, Ltd. Unit C Stafford Park 7, Telford Shropshire TF3 3BQ, England, United Kingdom

**Authorized Signature/date:**

*I, the undersigned, do hereby declare that the equipment specified above conforms to the above Directive(s) and Standard(s).*

Signature:



Full Name: Renno Budziak

Position: Vice President of Engineering, Installation Systems Division

Place: Kingston, New York, USA

Date: May, 1996

**Huck Model Series 2400, 2500 and 2600 (families)**  
**Sound Level**

SEL = 75.8 dB (A)  
peak value = 108.2 dB (C)

For an eight hour work day, installing 3000 typical Huck fasteners will result in an equivalent noise level (Leq) of 66 dB (A).

To calculate equivalent noise level for other quantities of fasteners in an eight hour period, use the formula:

$$Leq = SEL + 10 \log (n/28,800)$$

where n = number of fasteners in eight hours.

**Huck Model Series 2400, 2500 and 2600 (families)**  
**Vibration Level**

For an eight hour work day, installing 3000 typical Huck fasteners will result in an equivalent weighted RMS vibration level (Aeq) of 12.50m/s<sup>2</sup>.

To calculate equivalent vibration level for other quantities of fasteners in an eight hour period, use the formula:

$$\text{Equivalent Vibration Level, } Aeq \text{ (m/s}^2\text{)} = (n/480) \times 2.00$$

where n = number of fasteners in eight hours,  
and 2.00(m/s<sup>2</sup>) = Aeq for 60 seconds.

# SAFETY

*This instruction manual must be read with particular attention to the following safety guide lines, by any person servicing or operating this tool.*

## 1. Safety Glossary



— Product complies with requirements set forth by the relevant European directives.



— Read manual prior to using equipment.



— Eye protection required while using this equipment.



— Hearing protection required while using this equipment.



**WARNINGS - Must be understood to avoid severe personal injury.**

**CAUTIONS** - show conditions that will damage equipment and or structure.

**Notes** - are reminders of required procedures.

**Bold, Italic type and underlining** - emphasizes a specific instruction.

2. Huck equipment must be maintained in a safe working condition at all times and inspected on a regular basis for damage or wear. Any repair should be done by a qualified repairman trained on Huck procedures.
3. Repairman and Operator must read manual prior to using equipment and understand any Warning and Caution stickers/labels supplied with equipment before connecting equipment to any primary power supply. As applicable, each of the sections in this manual have specific safety and other information.
4. See MSDS Specifications before servicing the tool. MSDS Specifications are available from you Huck representative or on-line at [www.huck.com](http://www.huck.com). Click on Installation Systems Division.
5. When repairing or operating Huck installation equipment, always wear approved eye protection. Where applicable, refer to ANSI Z87.1 - 1989
6. Disconnect primary power source before doing maintenance on Huck equipment.
7. If any equipment shows signs of damage, wear, or leakage, do not connect it to the primary power supply.
8. Make sure proper power source is used at all times.
9. Never remove any safety guards or pintail deflector.
10. Never install a fastener in free air. Personal injury from fastener ejecting may occur.
11. When using an offset nose always clear spent pintail out of nose assembly before installing the next fastener.
12. If there is a pinch point between trigger and work piece use remote trigger. (Remote triggers are available for all tooling).
13. Do not abuse tool by dropping or using it as a hammer. Never use hydraulic or air lines as a handle. Reasonable care of installation tools by operators is an important factor in maintaining tool efficiency, eliminating downtime, and in preventing an accident which may cause severe personal injury.
14. Never place hands between nose assembly and work piece.
15. Tools with ejector rods should never be cycled with out nose assembly installed.
16. When two piece lock bolts are being used always make sure the collar orientation is correct. See fastener data sheet of correct positioning.

# CONTENTS

Description	5
Specifications	5
Principle of Operation	8
Preparation for Use	9
Checking and Adjusting Pressures	9
Operating Instructions	10
Maintenance	11
Preventive Maintenance	12
System Inspection	12
POWERIG® Hydraulic Unit Maintenance	12
Tool/Nose Assembly Maintenance	12
Troubleshooting	13-14
Spare Parts and Service Kit	14
Disassembly	15
Assembly	17
Specifications for Standard Parts	18
Piston Disassembly/assembly Tool	20

# TABLES

1. Specifications	5
2. Service Kit	18
3. Fastener Selection Chart	32

# DESCRIPTION

Huck Models 2502 and A2502 Hydraulic Installation Tools are designed to install a wide range of Huck Blind Fasteners and HUCK-BOLT® Fasteners. This mini-tool is a lightweight and compact tool which particularly adapts it to install fasteners in limited clearance areas.

The tool is designed to be powered by a Huck POWERIG® Hydraulic Unit set to operate at a maximum of (\*) 5,700 psi (39,300 kPa)

**PULL** and 2,200 psi (15,180 kPa) **RETURN** pressures. **CAUTION: To install -12 diameter fasteners in MG, GP and LGP, only, PULL pressure must be set at 8400 psi. See (\*) below.**

Model 2502 has an electric switch for POWERIG Hydraulic Unit Models 918, 918-5, 940, 943-913, or equivalent. **Model A2502** has an air trigger for POWERIG Hydraulic Unit Model 942

and Model 970-3. Model 970-3 may be used when lower PULL and RETURN pressures are sufficient.

A nose assembly is required for each fastener type and size. Nose assemblies must be ordered separately. See your Huck representative for available Nose Assembly Selection Chart and additional Fastener Selection Chart.

Each tool is complete with 12 ft. hydraulic hoses and couplings, electric switch and cord (2502) or air trigger and tubing (A2502). The tool is basically a cylinder and piston assembly. An unloading valve, designed to relieve the hydraulic pressure at end of PULL stroke, is positioned by the piston. The end of the piston rod is threaded and a retaining nut and stop are included for attaching nose assemblies.

## TABLE 1 - SPECIFICATIONS (1)

Length	7.88 in.	(201 mm)
Width	2.00 in.	(51.5 mm)
Height (incl. handle)	5.88 in.	(150 mm)
Weight	4.50 lbs.	(2.04 kg)
Max. PULL press.	5700/8400 psi (*)	(39,300/57,900 kPa)
Max. RETURN press.	2400 psi	(16,500 kPa)


(1) Lengths and weights do not include nose assemblies.

**Power Source:** Huck POWERIG Hydraulic Unit

**Fasteners Installed:** See “TABLE 3 - FASTENER SELECTION CHART”


**Hydraulic Fluid:** Automatic transmission fluid. DEXRON II, or equivalent

Fig. 1

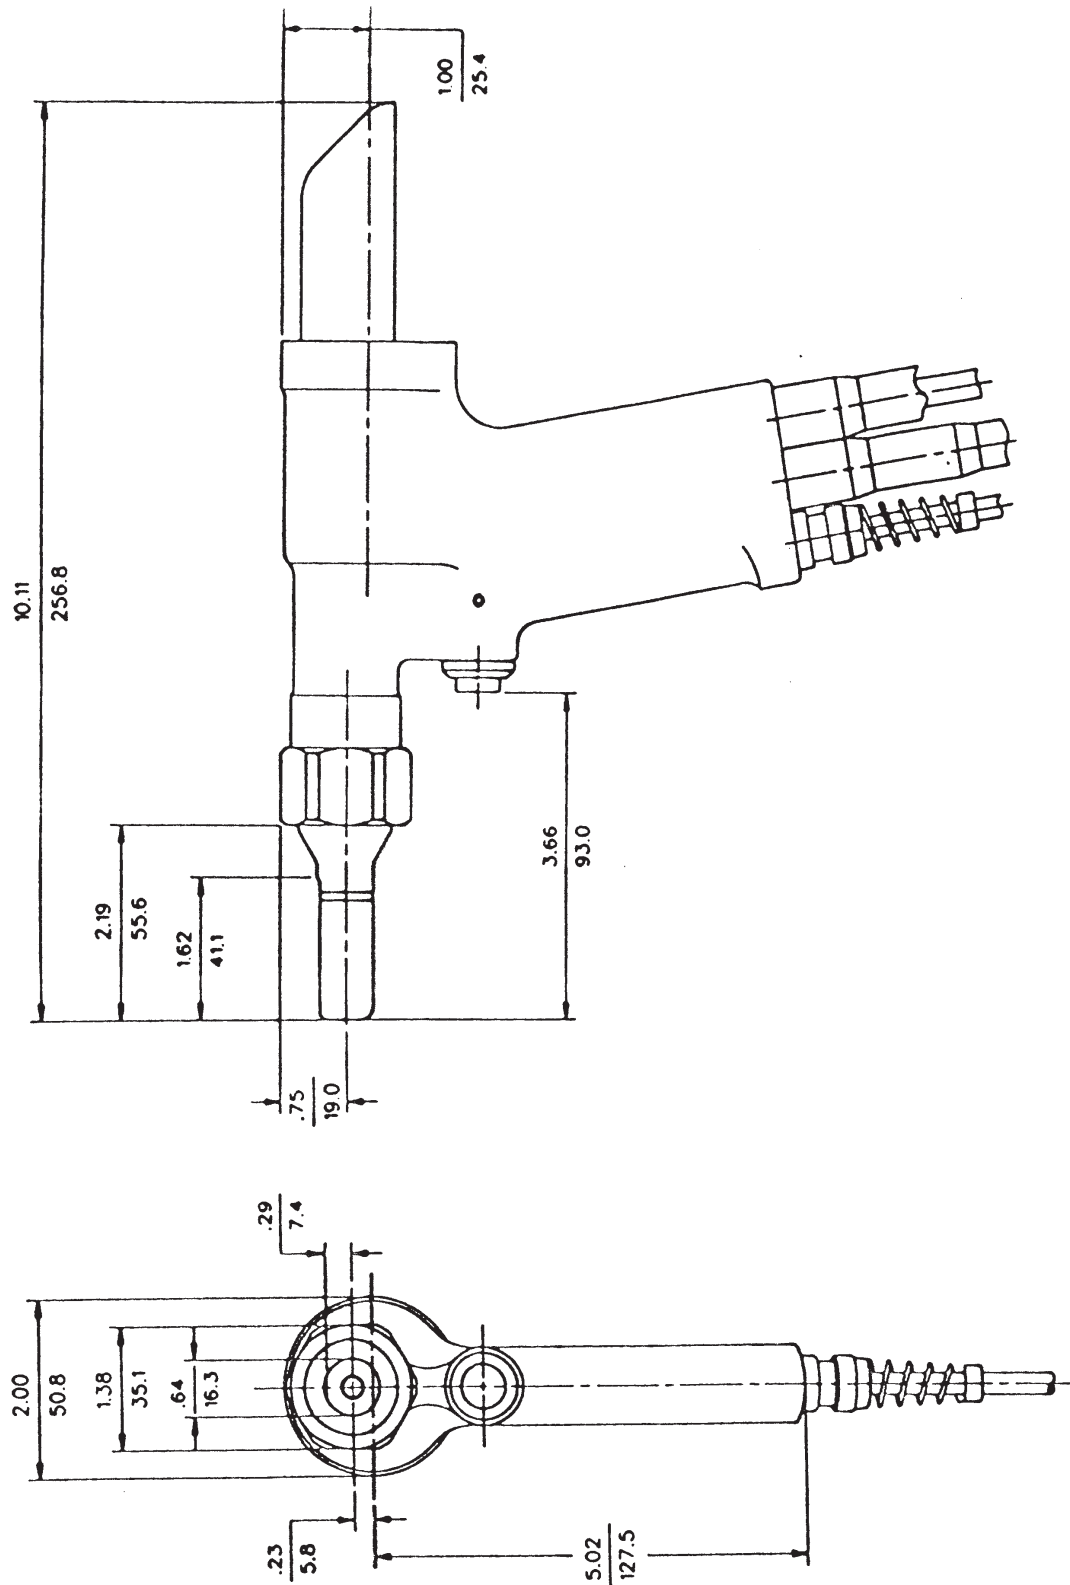

Outline Dimensions

Fig. 2

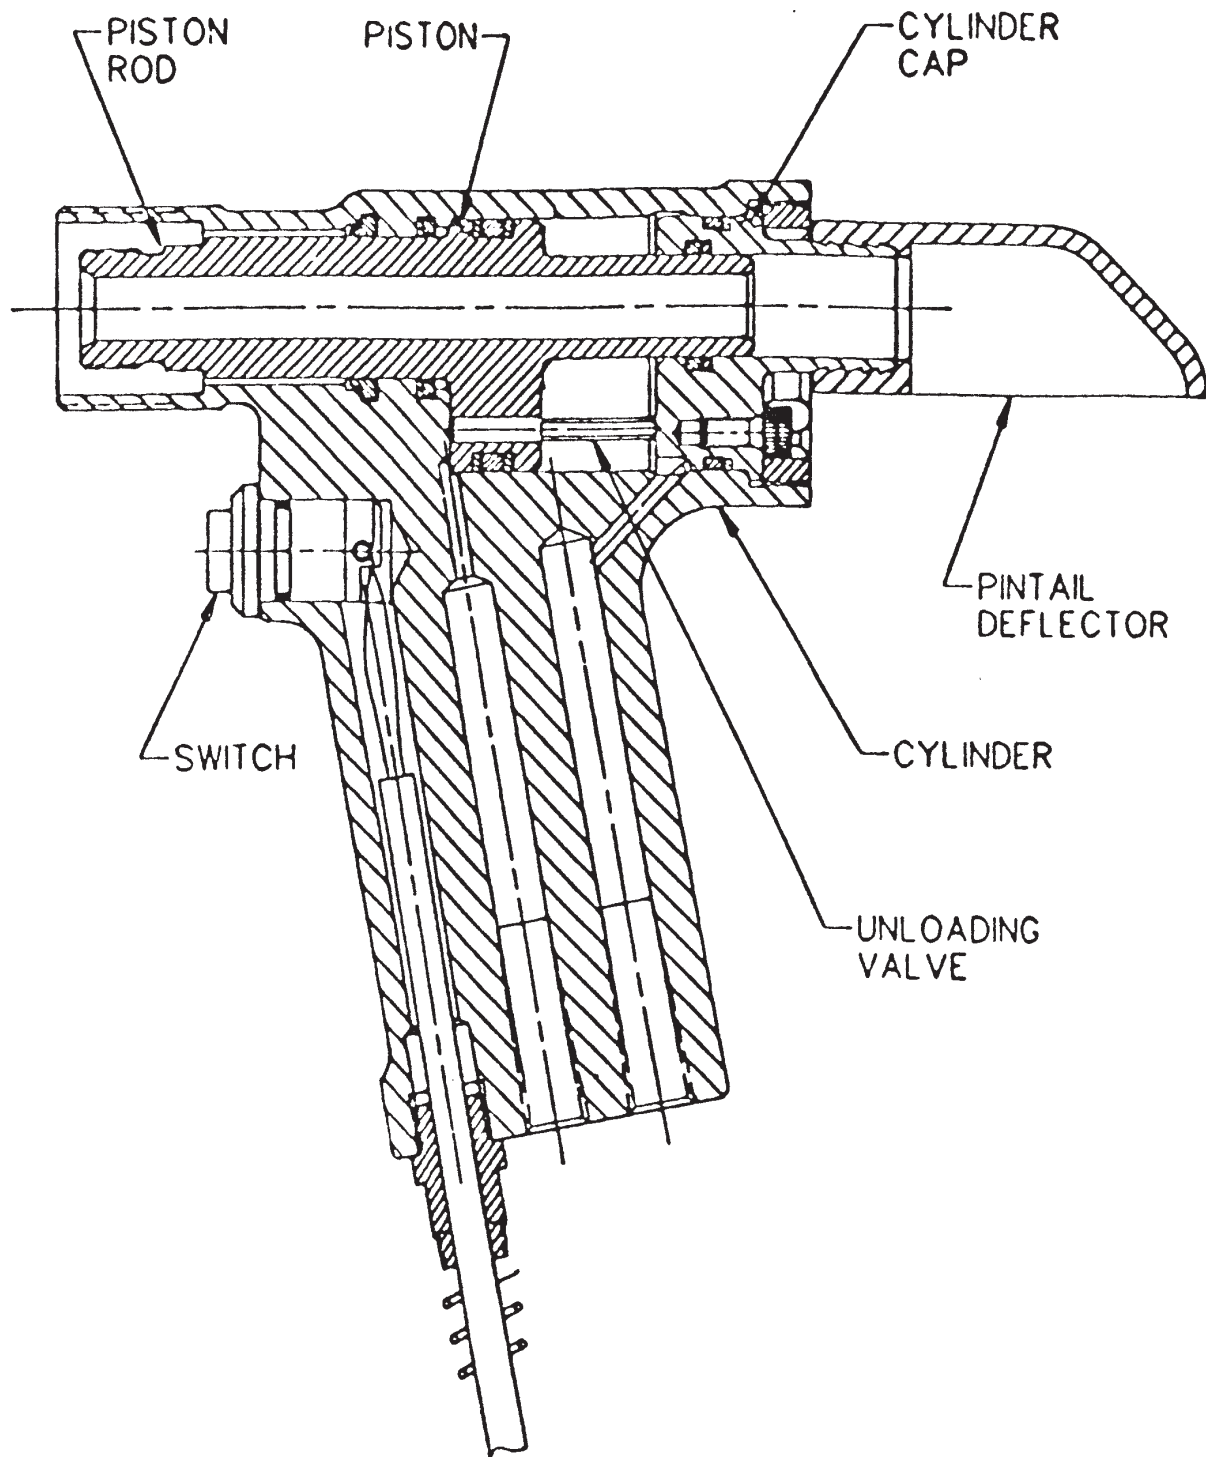

Sectional View

# PRINCIPLE OF OPERATION



When hydraulic hoses and trigger control are connected to POWERIG Hydraulic Unit, an air or electric trigger controls PULL and RETURN strokes of tool. Trigger is depressed and hydraulic pressure is directed to PULL side of Piston. Fastener installation begins.

When fastener installation is completed, the trigger is released. Hydraulic pressure is directed to RETURN side of piston moving piston forward. Nose assembly, with tool, is pushed off installed fastener.

At end of PULL stroke, piston uncovers flats of unloading valve. When flat is uncovered, pressure is unloaded by allowing fluid to flow back to POWERIG hydraulic unit.

## CAUTION

Keep dirt and other foreign matter out of hydraulic systems of the tools, hoses, couplers and POWERIG Hydraulic Unit. Do not let hose fittings and couplers contact a dirty floor or unclean working surface. Foreign matter in hydraulic fluid may cause tool and hydraulic unit valves to malfunction.



## **WARNINGS**

**When operating Huck Installation equipment, always wear approved eye protection.**

**Huck recommends that only Huck POWERIG Hydraulic Units be used as the power source for Huck installation equipment. Hydraulic power units that deliver high pressure for both PULL and RETURN, and are not equipped with relief valves are specifically not recommended, and may be dangerous.**

**Proper PULL and RETURN pressures are important for proper function of Installation Tools. Severe personal injury, or damage to equipment may occur without correct pressures. Gauge Set-up, P/N T-10280, is available for checking these pressures using instructions furnished with T-10280 and in applicable POWERIG Hydraulic Unit instruction manuals - - see “TABLE 1 - SPECIFICATIONS” for pressures.**



# PREPARATION FOR USE



**CAUTION:** Do not let disconnected hoses and couplers contact a dirty floor. Dirt/debris in hydraulic fluid causes valve failure in the POWERIG® Hydraulic Unit. See CAUTION in “DESCRIPTION” and in “FIGURE 3 - SECTIONAL VIEW II”

Rub SLIC-TITE TEFLON thread compound, or equivalent, on pipe threads to prevent leaks and for ease of assembly -- **CAUTION: Do not use TEFLON tape on pipe threads** -- particles of shredded tape cause failure of hydraulic unit valve. (SLIC-TITE -- in stick form, P/N 503237; manufactured by Markal Co.) **Note:** Where a part number (P/N) is given, Huck sells that part.

## Checking and Adjusting Output Pressures



**WARNINGS:** Correct PULL and RETURN pressures are required for operators safety and for Installation tool's function. Gauge Set-Up, T-10280, is available for checking pressures -- see tool's “TABLE I - SPECIFICATIONS” and “Instruction Manual, T-10280”. Failure to verify pressures may result in severe personal injury.

Be sure to connect tool's hydraulic hoses to POWERIG Hydraulic Unit before connecting tool's switch control cord to unit. **IF NOT CONNECTED IN THIS ORDER**, severe personal injury may occur.

1. Use Huck POWERIG Hydraulic Unit, or equivalent, that has been prepared for operation per INSTRUCTION MANUAL.

Check both PULL and RETURN pressures, and if required, adjust to pressures given in “TABLE 1 - SPECIFICATIONS” of this manual. See both hydraulic unit's and T-10280's instruction manuals before and during checking procedure.

2. First, turn hydraulic unit to OFF, and then disconnect power supply from hydraulic unit. Connect tool's hoses to hydraulic unit.
3. Connect tool's control switch electrical cord to hydraulic unit.
4. Connect hydraulic unit to power supply. Turn hydraulic unit to ON. Hold Tool trigger depressed for 30 seconds; depress trigger a few times to cycle tool and to circulate hydraulic fluid. Observe action of tool and check for leaks. Turn hydraulic unit to OFF.
5. Select nose assembly from “NOSE ASSEMBLY SELECTION CHART” for fastener to be installed. Disconnect tool's control switch electrical cord from hydraulic unit; disconnect hydraulic unit from power supply. Attach nose assembly to tool as given by instructions on “NOSE ASSEMBLY DATA SHEET”.
6. Reconnect hydraulic unit to power supply; reconnect tool's switch control cord to unit. Check operation of nose assembly -- see “NOSE ASSEMBLY DATA SHEET” -- install fasteners in test plate of correct thickness with proper size holes. Inspect installed fasteners. If fasteners do not pass inspection, see “TROUBLESHOOTING” to locate and correct tool malfunction.

# OPERATION INSTRUCTIONS



**For safe operation, please read completely**



## **WARNINGS**

Do not pull on a pin without placing fastener/collar in a workpiece, and also, collar chamfer **MUST** be out toward tool - - these conditions cause pin to eject with velocity and force when the pintail breaks off or teeth/grooves strip. This may cause severe personal injury.

To avoid severe personal injury, be sure of adequate clearance for operator's hands before proceeding with fastener installation.

## **CAUTION**

Remove excess gap from between the sheets - - this permits enough pintail to emerge from collar for **ALL** jaw teeth to engage with pintail - - if **ALL** teeth do not engage properly, jaws will be stripped/damaged.

To avoid structural and tool damage, be sure enough clearance is allowed for nose assembly at full stroke. Do not abuse tool by dropping it, using it as a hammer or otherwise causing unnecessary wear and tear.

Reasonable care of installation tools by operators is an important factor in maintaining tool efficiency and reducing downtime.

## **HUCKBOLT® Fastener Installation:**

Place pin in workpiece and place collar over pin - - see WARNING. (If Collar has only one tapered end, that end **MUST** be out toward tool - - not next to sheet.) Hold pin and push nose assembly onto pin protruding through collar until nose anvil touches collar. Depress trigger - - hold trigger depressed until collar is swaged and pintail breaks. Release trigger and tool will go into return stroke - - tool/nose are ready for next installation cycle.

## **Blind Fastener Installation:**



## **WARNING**

Do not pull on a pin without placing fastener in a workpiece - - fastener will eject from front with velocity and force when pintail breaks off or teeth/grooves strip - - this may cause severe personal injury.

Remove excess gap from between the sheets to permit correct fastener installation. Fastener may be placed in workpiece or In end of nose assembly - - see WARNING. In either case, tool/nose must be held against work and at right angles to it. Depress trigger - - hold trigger depressed until fastener is installed and pintail breaks. Release trigger and tool will go into its return stroke. The tool/nose are ready for next fastener installation cycle.

## **CAUTION**

**BOM blind fasteners jam in nose assembly if pulled when not in workpiece.**

## **Please note**

Failure to understand **WARNINGS** may cause severe personal injury.

Failure to understand **CAUTIONS** may cause damage to structure and Tool.

**For additional safety information, see near front of manual.**

# MAINTENANCE



**CAUTION:** Keep dirt and other harmful material out of hydraulic system this includes tool, hoses, couplers and POWERIG® Hydraulic Unit. Parts must be kept away from unclean work surfaces. Dirt in hydraulic fluid causes valve failure in POWERIG Hydraulic Unit.

## Good Service Practices

The efficiency and life of your Installation Tool depends upon proper maintenance and good service practices. Using the manual will help give a clear understanding of your tool and basic maintenance procedures -- please read entire page before proceeding with maintenance/repair. Use proper hand tools in a clean well-lighted area -- always be careful to keep dirt/debris out of pneumatic and hydraulic systems. Only standard hand tools are required in most cases; where a special tool is required, the description and part number are given.

While clamping installation tool and/or parts in a vise, and when parts require force, use suitable soft materials to cushion impact -- for example, using a half-inch brass drift, wood block and/or vise with soft jaws greatly diminishes the possibility of a damaged tool. Remove components in a straight line without bending, cocking or undue force -- reassemble tool with the same care.

**CAUTION:** Parts must be handled carefully and examined for damage or wear. Replace parts where required. Always replace O-rings and back-up rings when the tool is disassembled for any reason.

**Note:** Where a part number (P/N) is given, Huck sells that part. Consult manual's TROUBLESHOOTING" if malfunction occurs -- then see "DISASSEMBLY"; ASSEMBLY"; "SECTIONAL VIEWS" etc. for further details.

## Sealants; Lubricants; Hydraulic Fluid; Service Kits

Rub SLIC-TITE TEFLON thread compound, or equivalent, on pipe threads to prevent leaks and for ease of assembly -- **CAUTION: Do not use TEFLON tape on pipe threads** -- particles of shredded tape cause hydraulic unit valve failure or malfunction. (SLIC-TITE -- in stick form, P/N 503237.)

Smear LUBRIPLATE 130AA, or equivalent lubricant, on O-rings and mating surfaces. This prevents nicking/pinching O-rings on any rough/tight spot and increases ease of assembly. (LUBRIPLATE 130AA -- in tube, P/N 502723.)

Service Kit contains perishable parts -- see "TABLE 2- SERVICE KIT". For convenience, and as experience verifies, keep extra Service Kits (O-rings; back-up rings; other standard items) and tool parts on hand. When in short supply, you can obtain O-rings and back-up rings from any regular retailer of these items. Ask for: O-ring size (AS 568-number); material and durometer. For this and additional information on O-rings and back-up rings, see "SPECIFICATIONS for STANDARD PARTS" and "TABLE 2- SERVICE KIT".

# MAINTENANCE (CONT.)



## PREVENTIVE MAINTENANCE

### System Inspection

Operating efficiency of the tool is directly related to performance of complete system including tool with nose assembly, hydraulic hoses, switch and control cord, and POWERIG® Hydraulic Unit. An effective preventive maintenance program includes scheduled inspections of the system to detect and correct minor troubles.

1. Inspect tool and nose assembly for external damage.
2. Verify that hose fittings, couplings and electrical connections are secure.
3. Inspect hydraulic hoses for signs of damage or deterioration. Do not carry tool suspended from hoses coupled together. Replace hoses as required.
4. Observe/monitor tool, hoses and POWERIG Hydraulic Unit during operation to detect abnormal heating, leaks or vibration.

## POWERIG® Hydraulic Unit Maintenance

Maintenance and repair instructions are in applicable POWERIG Hydraulic Unit Instruction Manual.

### Tool/Nose Assembly Maintenance and Precautions

Whenever disassembled, and also at regular intervals (depending on severity and length of use), **replace all O-rings and back-up rings** -- Service Kits should be kept on hand. Inspect cylinder bore, piston and rod, and unloading valve for scored surfaces excessive wear or damage — replace parts as necessary.

Nose assembly with UNITIZED™ jaws must be disassembled and cleaned in ***MINERAL SPIRITS or ISOPROPYL ALCOHOL***. Do not let **UNITIZED jaws (urethane) soak in the solvent**. Do not use solvents that cause urethane to swell. Use a sharp pointed “pick” to remove particles packed in pull grooves of jaws. **IMMEDIATELY** after cleaning, completely dry the parts.

# TROUBLESHOOTING



Always check out the simplest possible cause of a malfunction first. For example, switch turned off or power cord not connected. Then proceed logically, eliminating each possible cause until the

defective circuit or part is located. Where possible, substitute known good parts for suspected bad parts. Use the chart below, as an aid for locating and correcting malfunctions.

- 1. Tool fails to operate when trigger is depressed**
  - a. Inoperative POWERIG® Hydraulic Unit. See applicable instruction manual.
  - b. Loose or disconnected control cord, or air hose.
  - c. Damaged trigger assembly.
  - d. Loose or faulty hydraulic hose couplings.
  - e. Unloading valve not installed in tool.
- 2. Tool operates in reverse.**
  - a. Reversed hydraulic hose connections between hydraulic unit and tool.
- 3. Tool leaks hydraulic fluid.**
  - a. Depending on where leak occurs, defective or worn O-rings, or loose hydraulic hose connection at tool.
- 4. Hydraulic couplers leak fluid.**
  - a. Damaged or worn O-ring in coupler body. See Figure 4.
- 5. Hydraulic fluid overheats.**
  - a. Hydraulic unit not operating properly. See applicable POWERIG Hydraulic Unit Instruction Manual.
  - b. Unloading valve installed backwards.
- 6. Tool operates erratically and fails to install fastener properly.**
  - a. Low or erratic hydraulic pressure supply - - air in system. See applicable POWERIG Instruction Manual.
  - b. Damaged or excessively worn piston O-ring in tool.
  - c. Unloading valve installed backwards.
  - d. Excessive wear or scoring of sliding surfaces of tool parts.
  - e. Excessive wear of unloading valve.

# TROUBLESHOOTING (CONT.)



- 7. Pull grooves on fastener pintail stripped during pull stroke.**
  - a. Operator not sliding jaws completely onto fastener pintail.
  - b. Incorrect fastener length.
  - c. Worn or damaged jaw segments.
  - d. Metal particles accumulated in pull grooves of jaw segments.
  - e. Excessive sheet gap.
  - f. Nose assembly not properly attached - - see Nose Assembly Data Sheet.
- 8. Collar of HUCKBOLT® Fastener not completely swaged.**
  - a. Improper tool operation. See 6.
  - b. Scored anvil in nose assembly.
- 9. Shear collar on Huck blind fastener not properly installed.**
  - a. Improper tool operation. See 6.
  - b. Worn or damaged driving anvil in nose assembly.
- 10. Tool “hangs-up” on swaged collar of HUCKBOLT Fastener.**
  - a. Improper tool operation. See 6.
  - b. RETURN pressure too low.
  - c. Nose assembly not properly attached - - see Nose Assembly Data Sheet.
- 11. Pintail of fastener fails to break.**
  - a. Improper tool operation. See 6.
  - b. Pull grooves on fastener stripped. See 7.
  - c. Worn piston and/or unloading valve.
  - d. Hydraulic pressure too low.
  - e. Damaged O-ring on piston.
- 12. Operator cannot slide nose assembly (completely) onto fastener pintail.**
  - a. Broken pintails jammed in tool. Install pintail tube if broken pintails will pass through.

## SPARE PARTS and SERVICE KIT

The quantity of spare parts that should be kept on hand varies with the application and number of tools in service. Service kits containing perishable parts, such as

O-rings, back-up rings, etc., should be kept on hand at all times. Parts included in Service Kit, 2502/2503KIT are shown in “TABLE 2 - SERVICE KIT”.



# DISASSEMBLY



Refer to appropriate illustrations and “Good Service Practices”.

The following procedure is for complete disassembly. **Disassemble only components necessary to check and replace damaged O-rings, back-up rings or components - - always replace seals, wipers, O-rings and back-up rings of disassembled components.**




## **WARNING**

Be sure electric control cord (or air trigger) hose is disconnected from POWERIG® Hydraulic Unit **BEFORE** disconnecting Tool's hydraulic hoses from unit. Before any maintenance, **DISCONNECT IN THIS ORDER** to avoid possible severe personal injury.

1. Disconnect electrical connector. Uncouple tool hydraulic hoses.
2. Remove nose assembly.
3. Unscrew coupling nipple and coupling body. Drain hydraulic hoses into container.
4. Push rearward on piston until remaining hydraulic fluid is drained into container. Discard fluid.
5. **NOTE: Do not remove hydraulic hoses from tool unless replacing.** Remove protective hose sleeve from hoses. To reach hose fittings, slide plastic shrouds back.
6. **2502:** Loosen strain relief grommet. Remove switch - - loosen set screw and carefully pry switch out with a small screw driver. Loosen two wires at rear of switch and remove it from cord. Pull cord out and remove grommet. Disassemble electrical connector to replace connector, or to rewire it.  
**A2502:** Unscrew air trigger assembly. Loosen air fitting. Pull out air trigger hose. Loosen air quick disconnect and remove it.
7. Remove deflector from end cap. Remove socket head cap screw from cap.
8. Hold a spanner wrench in slots of retaining ring - - loosen and remove ring.
9. Push piston, with unloading valve, and end cap out of tool - - see “FIGURE 6 - PISTON DISASSEMBLY/ASSEMBLY TOOL” and “FIGURE 7 - PISTON DISASSEMBLY DETAIL”.
10. Slide end cap and unloading valve from piston.
11. Use a small diameter pointed rod to remove all seals, wipers, O-rings and back-up rings from components.

Fig. 3

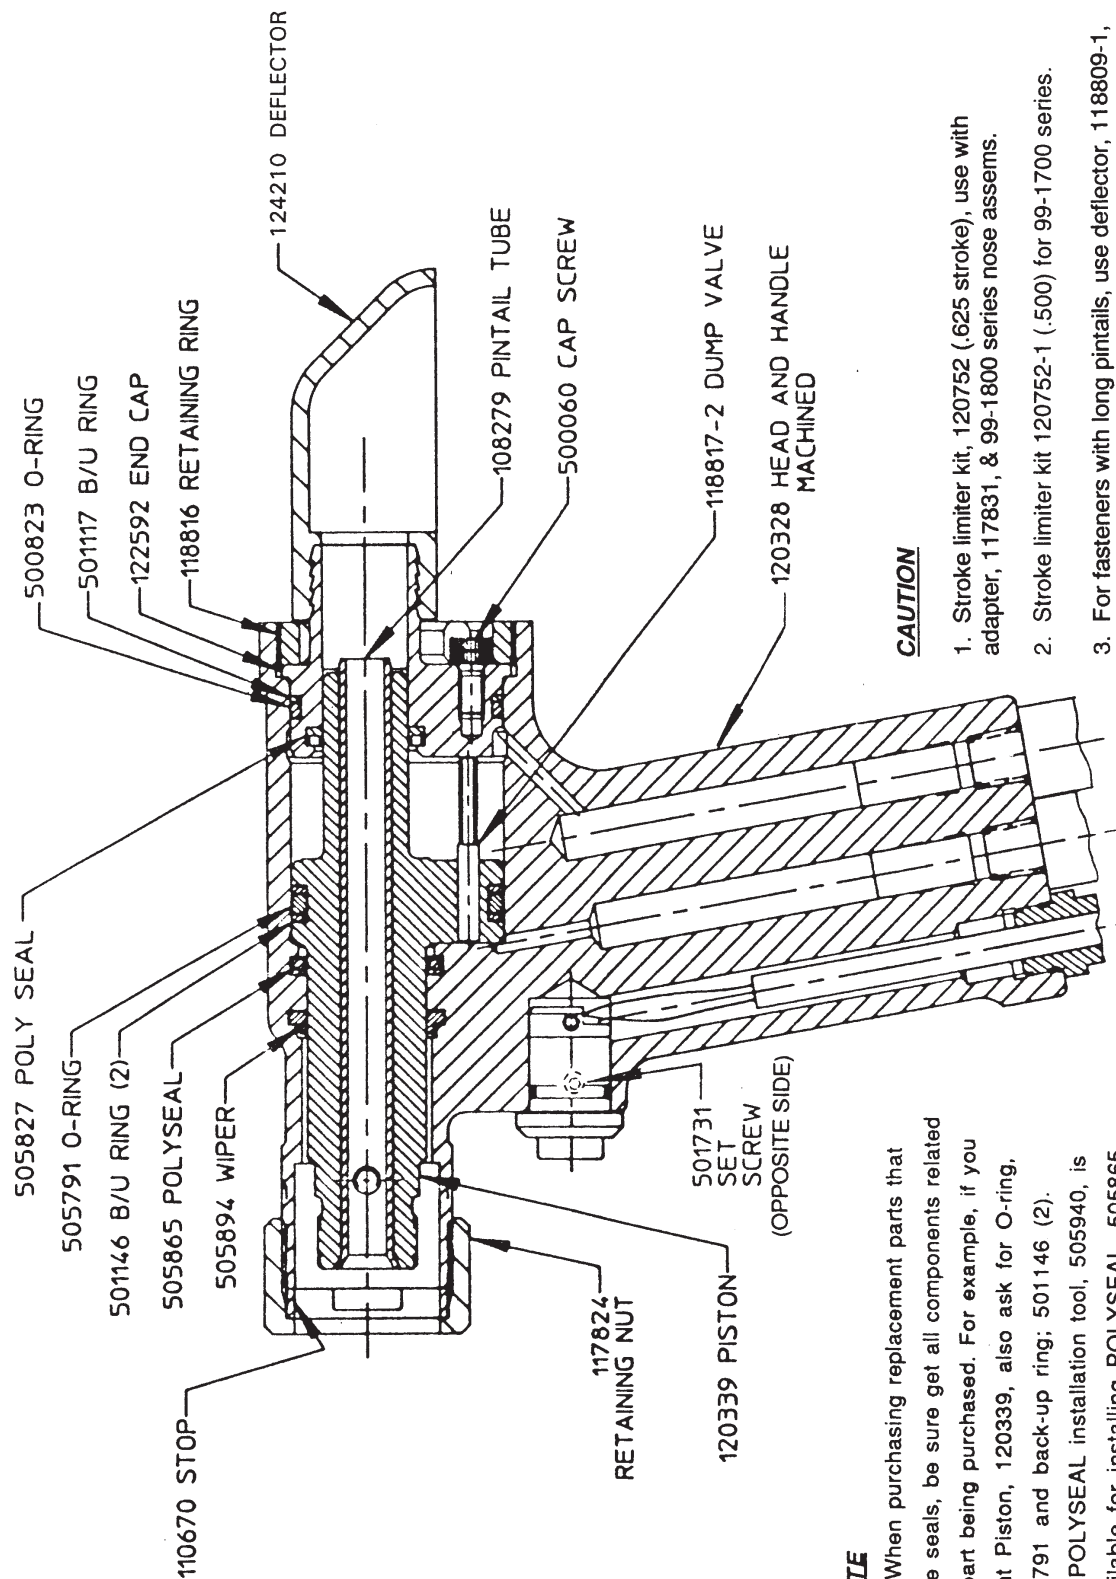**NOTE**

1. When purchasing replacement parts that have seals, be sure get all components related to part being purchased. For example, if you want Piston, 120339, also ask for O-ring, 505791 and back-up ring: 501146 (2).
2. POLYSEAL installation tool, 505940, is available for installing POLYSEAL, 505865.

**CAUTION**

1. Stroke limiter kit, 120752 (.625 stroke), use with adapter, 117831, & 99-1800 series nose assems.
2. Stroke limiter kit 120752-1 (.500) for 99-1700 series.
3. For fasteners with long pintails, use deflector, 118809-1, which is included with tool.

**Sectional View II**



# ASSEMBLY



Refer to appropriate illustrations and “Good Service Practices”.

Clean out O-ring grooves and reinstall perishable parts (O-rings, etc.). Use Service Kit - - ***always replace seals, wipers, O-rings and back-up rings of disassembled components.***

- 1 See “FIGURE 8 - PISTON ASSEMBLING DETAIL” and follow instructions carefully.
2. Slide unloading valve through hole in piston - - **the valve flats must be to the rear of the tool.**
3. Push end cap assembly over piston extension.
4. Screw in retaining ring - - tighten with spanner wrench. Install socket head cap screw in end cap.
5. Push pintail deflector over end cap - - it engages ribs on cap.
6. **CAUTION: Do not use TEFLON tape on pipe threads** - - see “MAINTENANCE, Sealants”. Thread hydraulic hoses into handle. Slide shrouds over fittings.
7. **2502:** Assemble electrical cord to connector. Screw strain relief grommet into handle. Push cord through grommet. Attach cord to trigger switch. Press switch into handle and tighten set screw against switch. Pull excess cord down through handle and grommet. Tighten strain relief grommet.
- A2502:** Thread air fitting into handle. Attach quick disconnect to air line. Attach air line to handle’s air fitting. Screw air trigger assembly into handles trigger fitting and tighten set screw against fitting.
8. Slide protective hose sleeve onto assembled hoses and control cord/air hose.
9. See **CAUTION** in 6. - - screw coupling nipple onto PULL pressure hose (from “P” port of tool). Screw coupling body onto RETURN pressure hose.
10. Install nose assembly per applicable instructions on “NOSE ASSEMBLY DATA SHEET”.
11. Connect electrical connector (or air hose) and hydraulic couplers to POWERIG® Hydraulic Unit.
12. See **WARNING** in “DISASSEMBLY” and reverse the given procedure i.e. **CONNECT HOSES FIRST**, and then, connect electrical cord (or air hose). See “PREPARATION FOR USE” before operating tool.


**TABLE 2 - SERVICE KIT (part no. 2502/2503KIT)**

Part No.	Description	Qty. per Assembly
504438 (A)	O-RING AS 568-111 CV747 75D	1.000
501102 (B)	BACK-UP RING S-11248-111	1.000
500773	O-RING AS 568-007 C366Y 70D	1.000
500777	O-RING AS 568-011 C366Y 70D	1.000
505791	O-RING AS 568-219 DISO C6865 70D	1.000
505790	O-RING AS 568-126 DISO C6865 70D	1.000
500823	O-RING AS 568-126 C366Y 70 DURO	1.000
505758	O-RING AS 568-114 DISO C9250 90D	1.000
501105	BACK-UP RING S-11248-114	1.000
501117	BACK-UP RING S-11248-126	1.000
501146	BACK-UP RING S-11248-219	2.000
505827	MICRODOT P/S 125-00.625 SQB	1.000
505865	MICRODOT P/S 125-00.875 SQB	1.000
505894	WIPER-MICRODOT 957-7	1.000
500060	SCREW-SOC HD CAP 10-24 X 3/8 LONG	1.000

**SPECIFICATIONS for STANDARD PARTS**

1. All part numbers are available from Huck. The 500000 series part numbers are standard parts which can generally be purchased locally.
2. O-ring sizes are specified AS 568- dash numbers (AS 568- is an Aerospace Size Standard for O-rings and formerly was known as ARP 568-). "TABLE 2" has specific material and durometer just after the identifying AS 568-000 number.
3. Back-up rings are W.S. Shamban & Co. series S-11248, single turn TEFLON (MS-28774), or equivalent. The dash numbers correspond to the O-ring AS 568- dash numbers.

Fig. 5

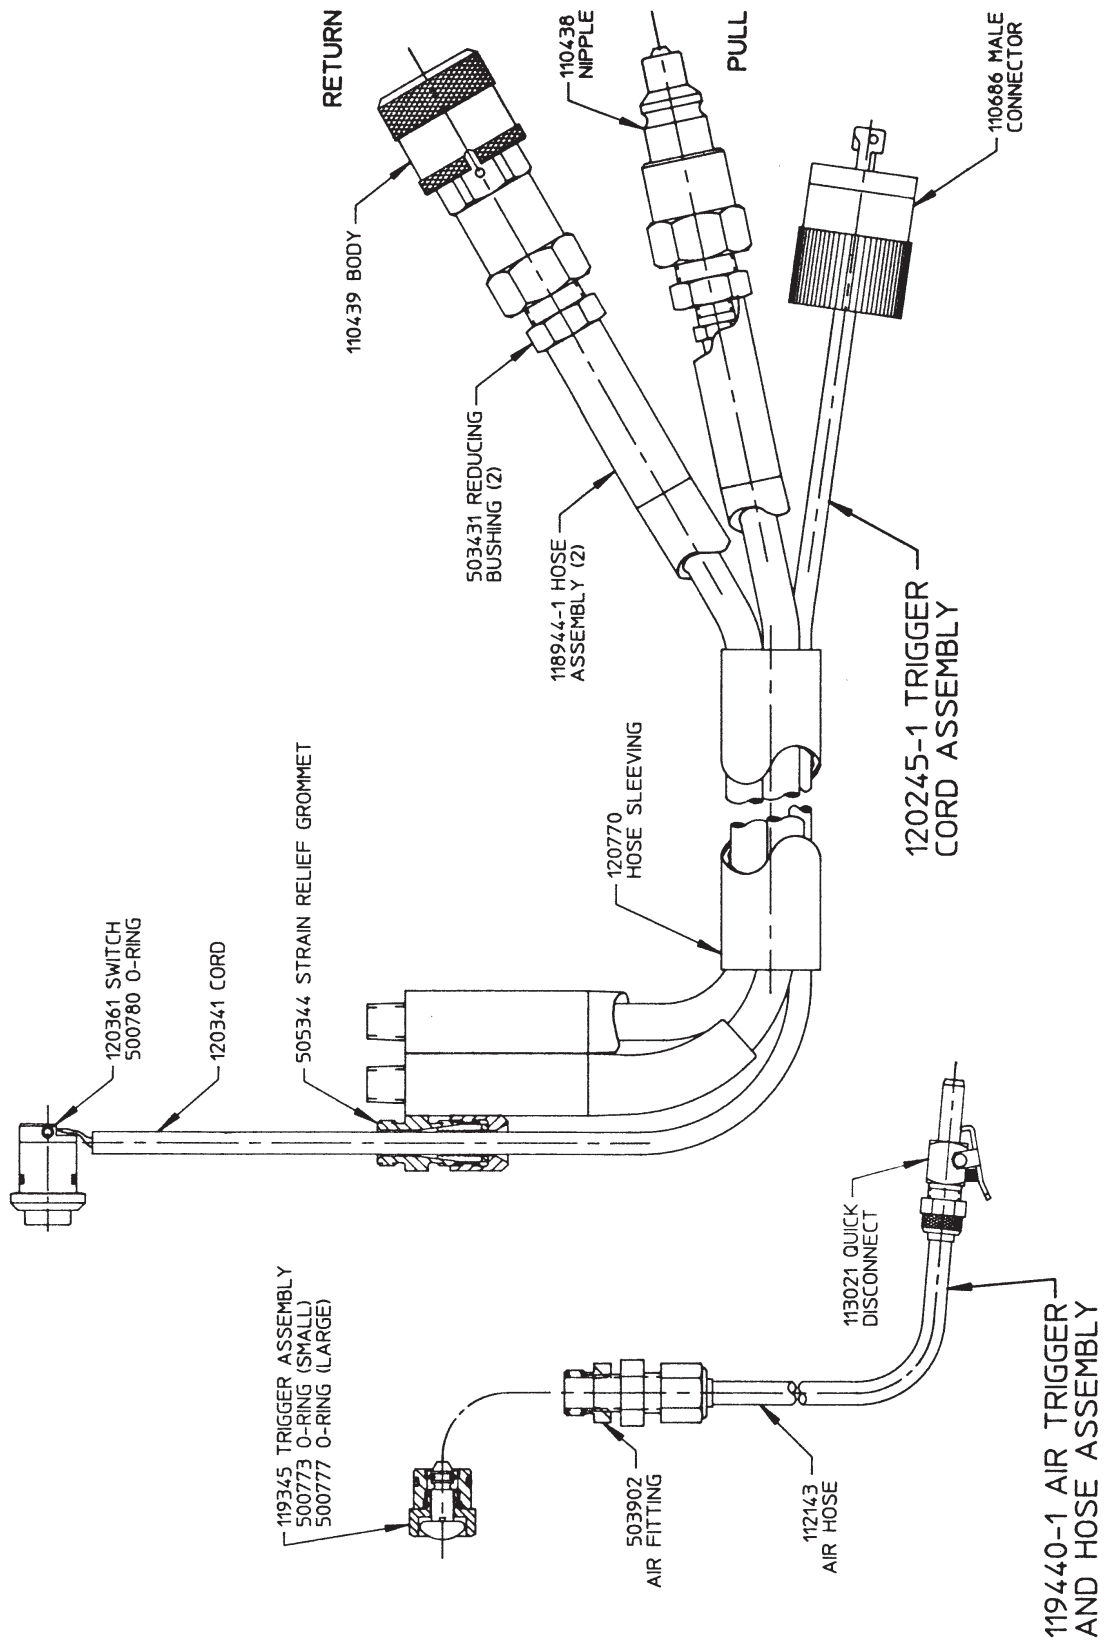

## Electric/Air Controls and Hydraulic Hoses

Fig. 6




**Piston Disassembly / Assembly Tool**

Fig. 7



Piston Disassembly Detail

Fig. 8

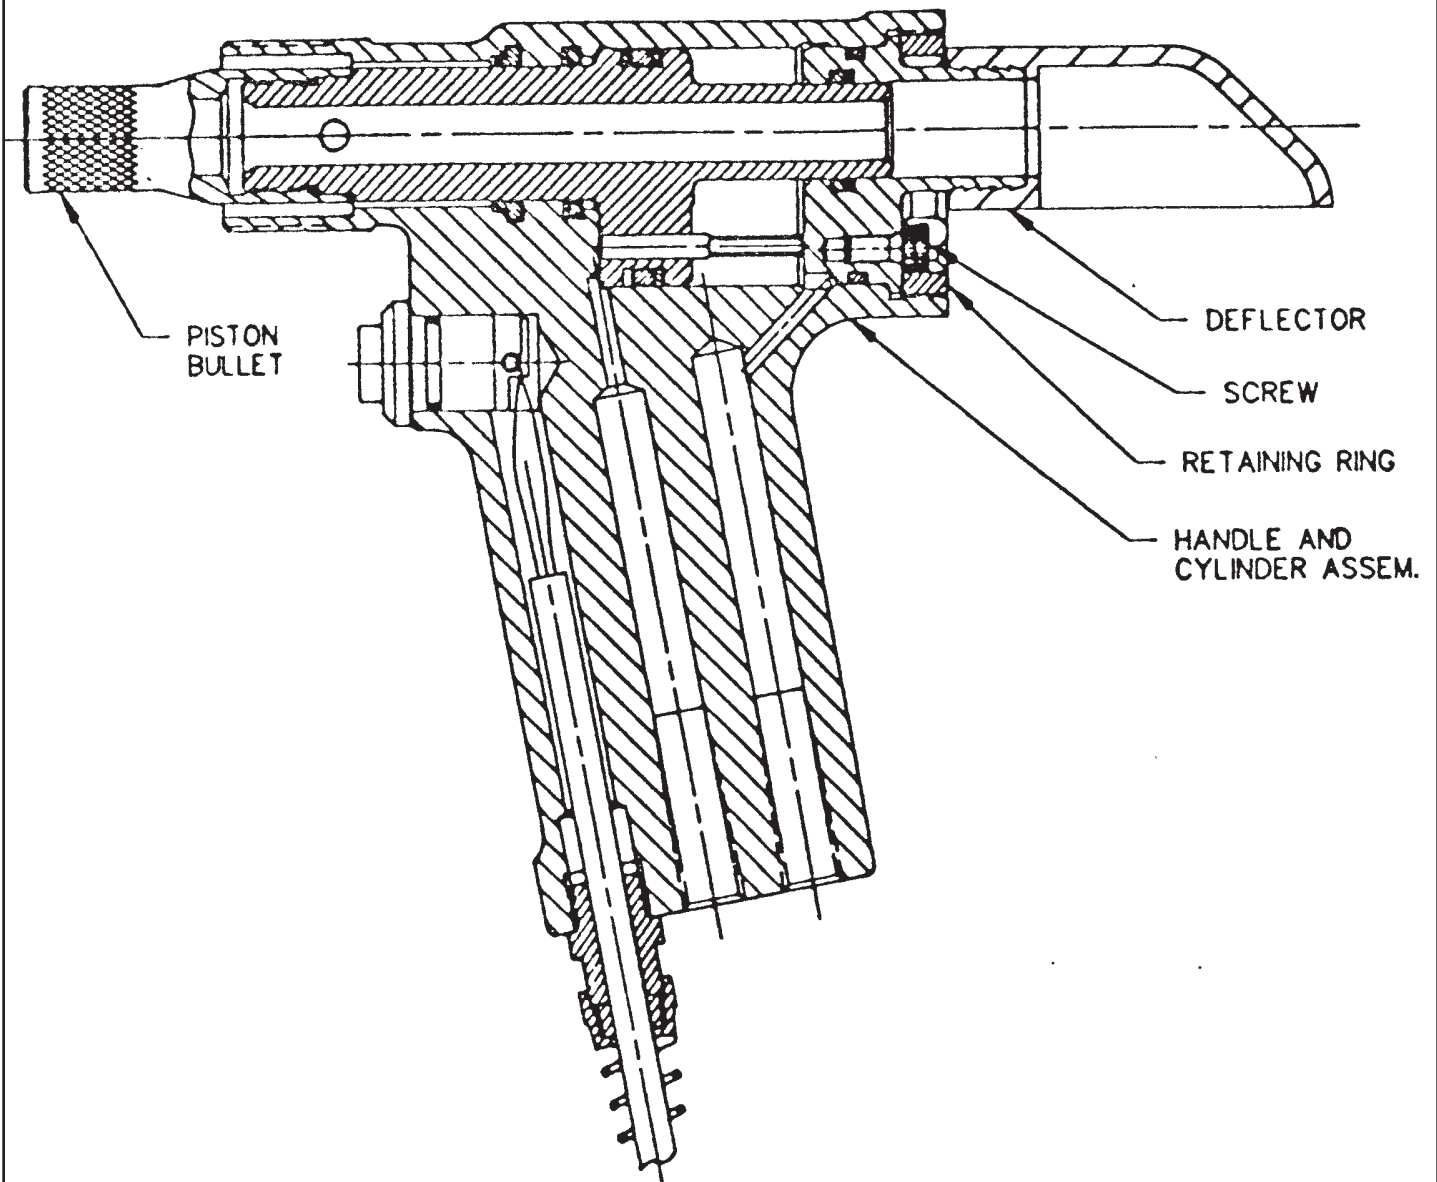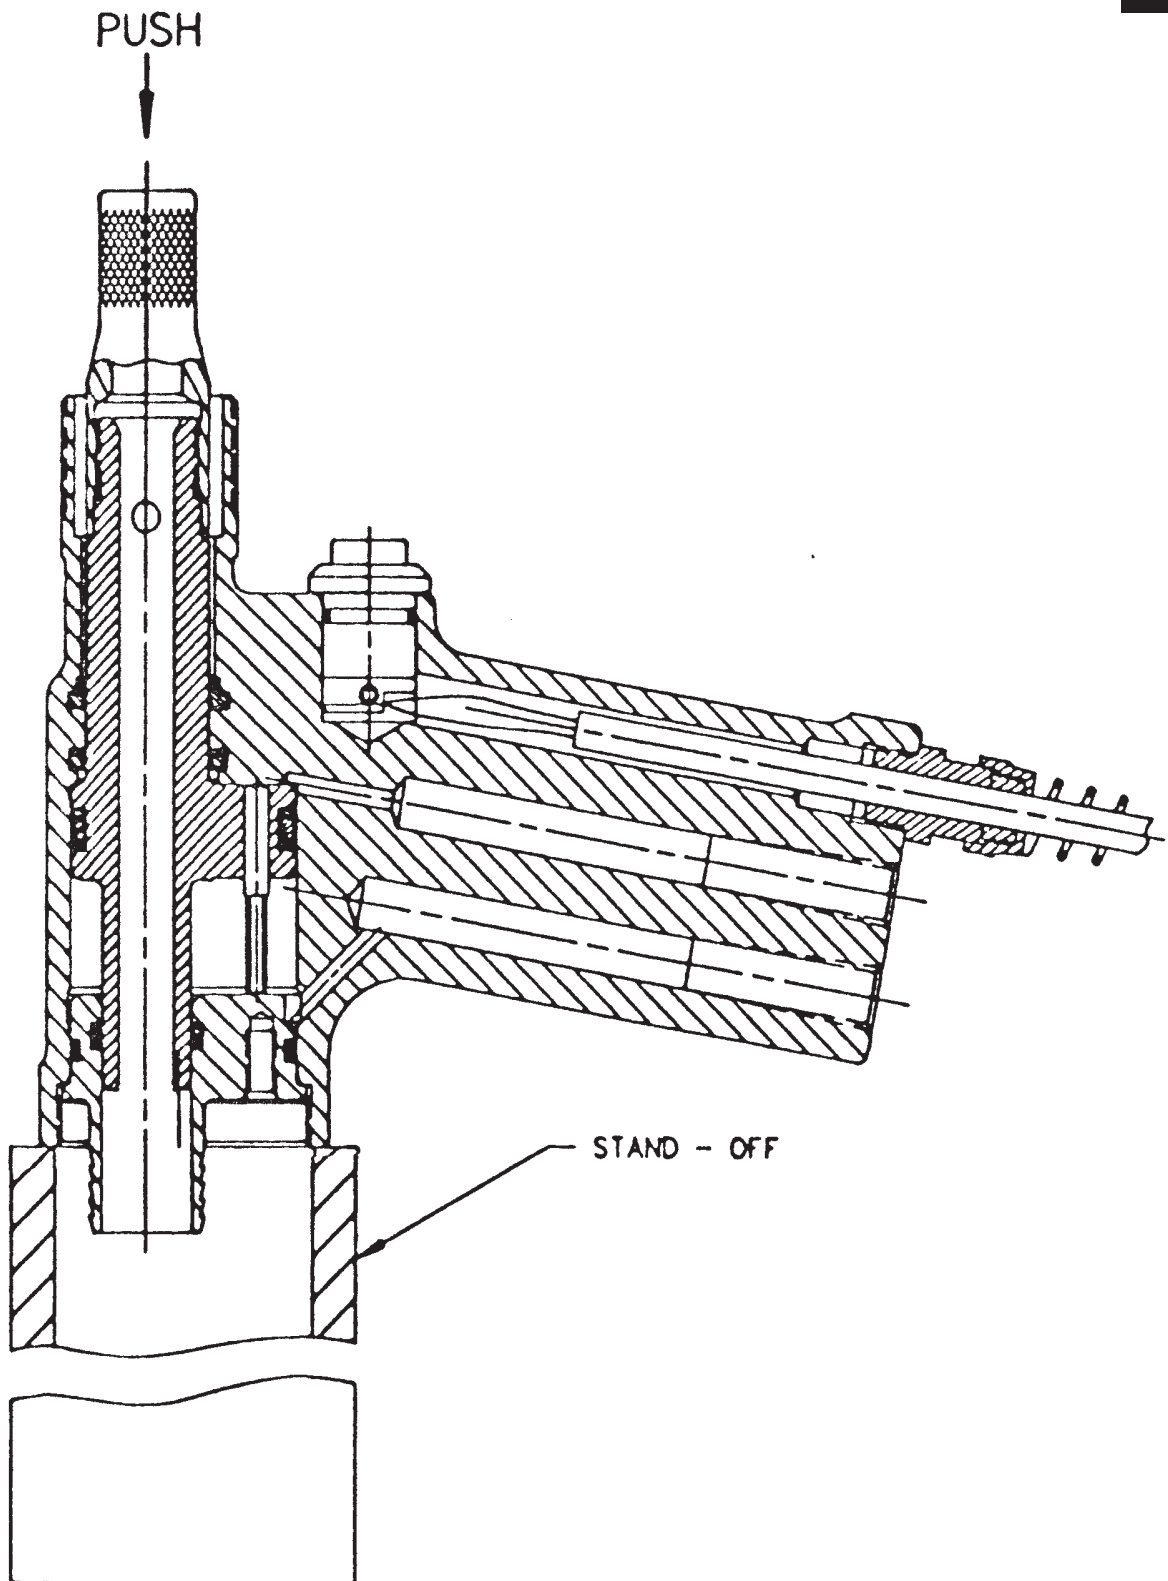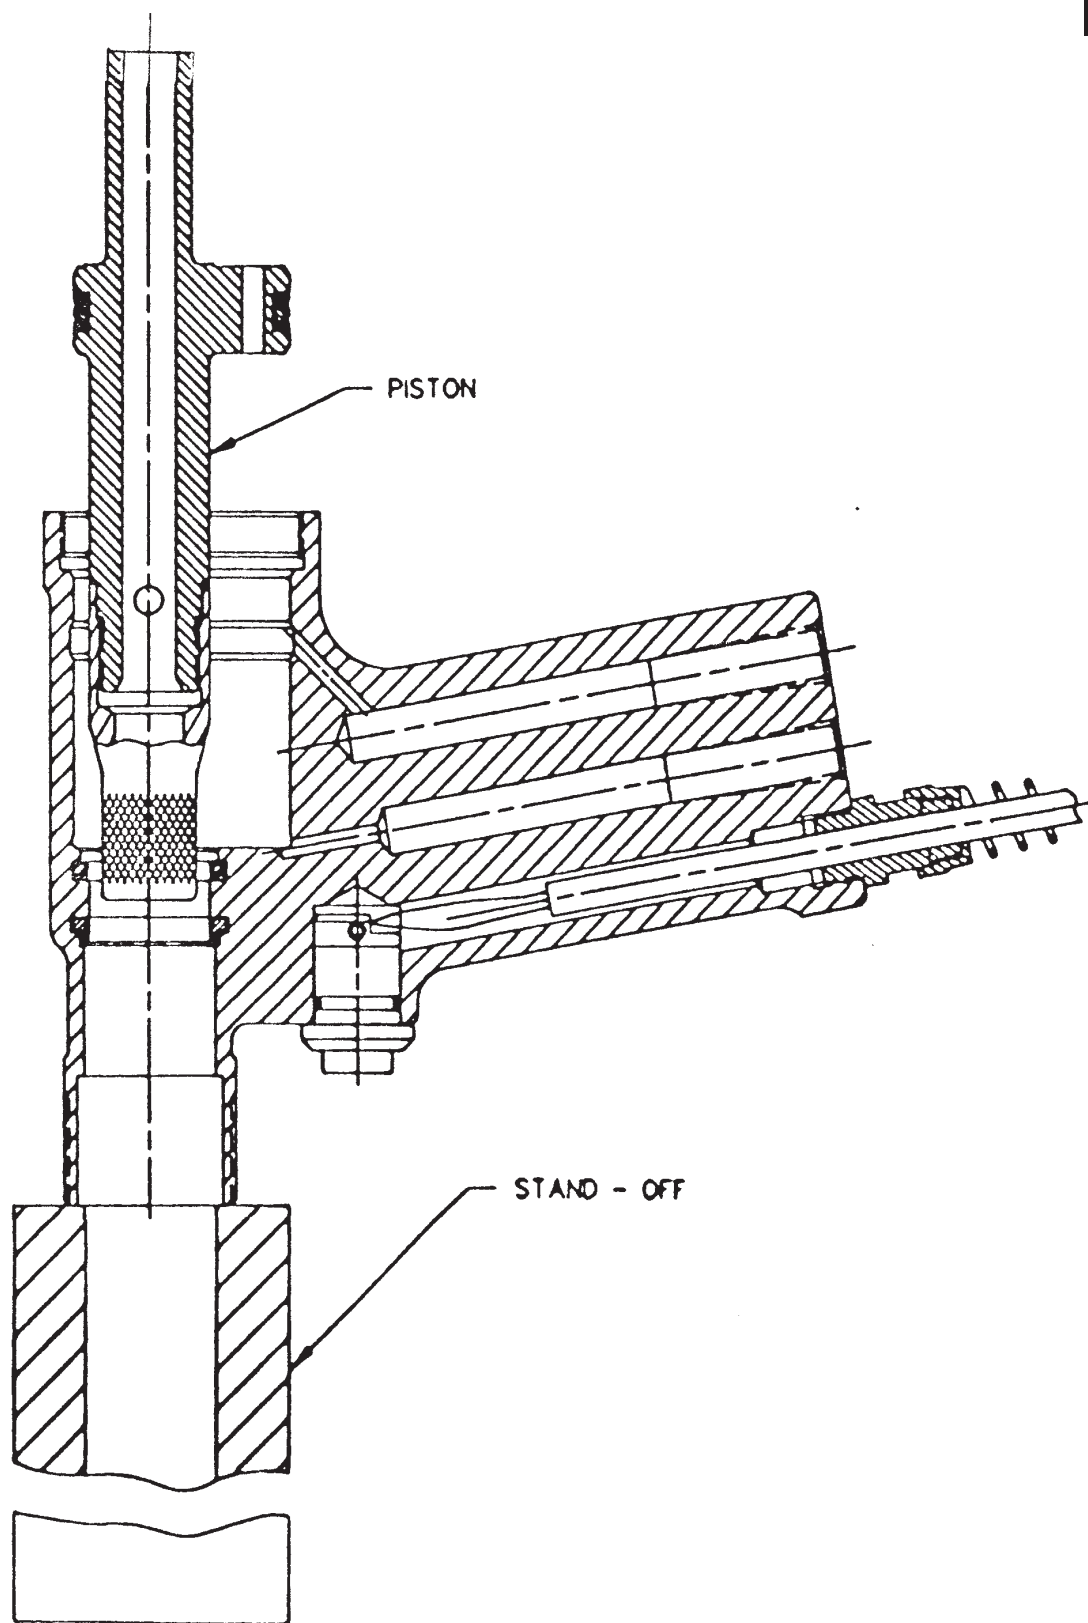

Piston Assembling Detail

## Air and Hydraulic Conversion Kit, 125149

Converts existing tool into the -2 version with 2' hoses.

<u>Part No.</u>	<u>Description</u>	<u>Quan.</u>
118944-2	Light Weight Hi-pressure Hose	2
122839	Female Q.D. Hyd. Fitting	1
122840	Male Q.D. Hyd. Fitting	1
112143-2	Air Hose	1
506973	Female Straight Connector	1
506267	Male Q.D. Air Fitting	1

## Stroke Limiter Kit, 120752

Changes stroke of any 2502 tool to .625 in.

<u>Part No.</u>	<u>Description</u>	<u>Quan.</u>
120739	Stroke Limiter	1
118817-4	Dump Valve	1

NOTES:		REV	DESCRIPTION	DATE
1 INCLUDE 119345 AND CABLE TIE P/N 505833 LOOSE IN BAG.		A	RELEASE	04/22/96

119345 AIR TRIGGER

112143-2 TUBING

503902 AIR FITTING

506267 PLUG


506973 FEMALE CONNECTOR

FORM: KED4 REV C		By accepting this proprietary Huck drawing, recipient agrees not to reproduce or disclose any part thereof to any others without the written permission of Huck International, Inc.	
MATERIAL:	SPEC:	TOLERANCES UNLESS OTHERWISE SPECIFIED: (ALL DIMENSIONS ARE IN INCHES)	
HARDNESS:	(RAW OR STOCKED STATE)	XX, XXX	-
HEAT TREAT TO:	SPEC:	INT. COR. RADII	-
SURFACE TREAT:	SPEC:	BREAK EDGES	-
SURFACE FINISH NOT TO EXCEED: Ra		ANGLES	+
IDENTIFICATION PER SPEC 42-311: ★ BAG		FINAL ASSY:	
SURFACES TO BE ○, //, ◇, ⊥, & □ WITHIN T.I.R.		DET: SMR	DATE: 04/22/96
		FAC: TFF	SCALE: FULL
		A	125142



REV	DESCRIPTION	DATE
K	DEFLECTOR 92120 WAS 18809	02/02/96
L	NEW STICKERS ADDED, 590240-1 WAS 590240.	05/30/96
	590160 WAS 590247	

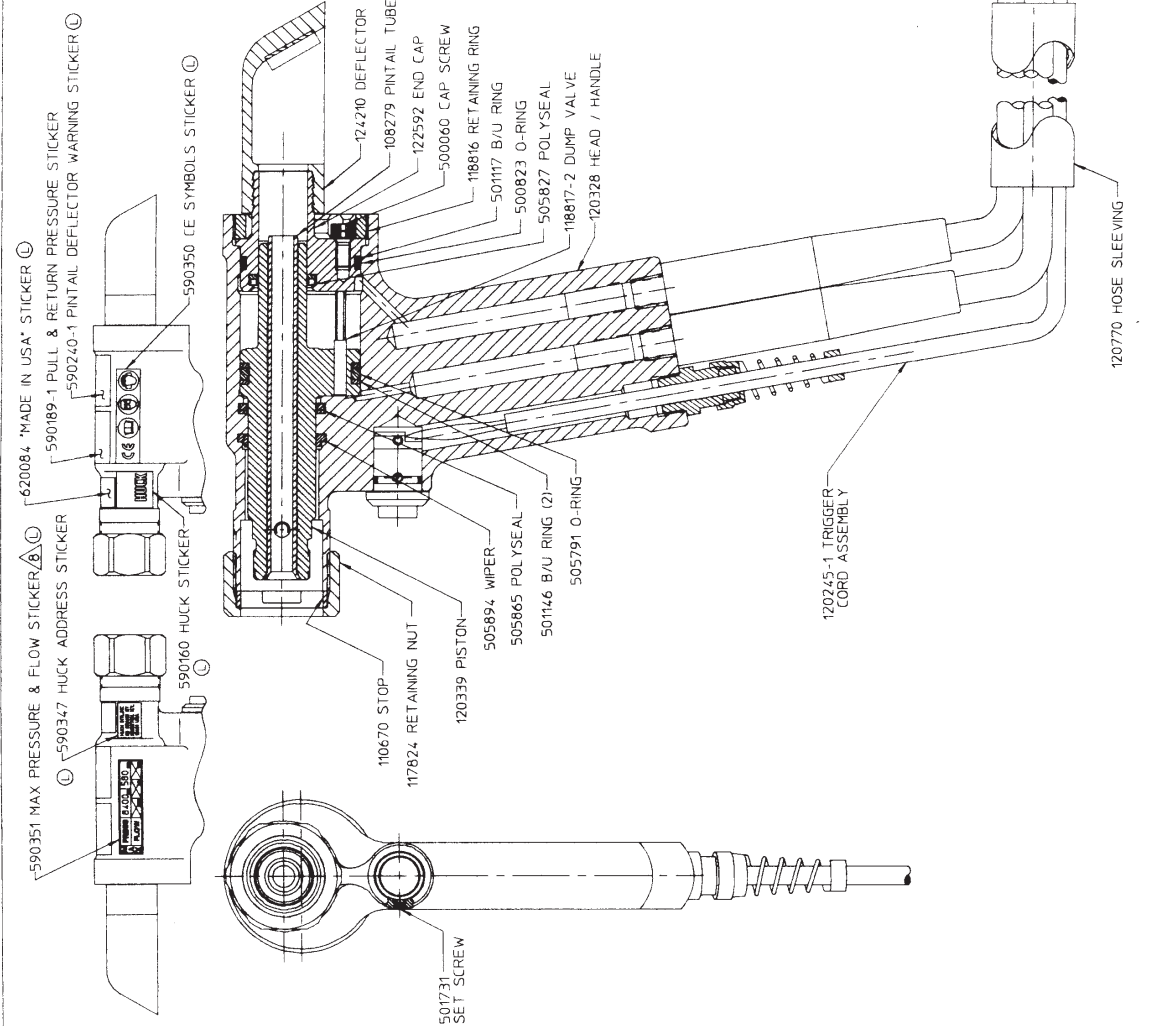

- NOTES:

- 1 FOR LONG PINNAIL FASTENERS. USE DEFLECTOR P/N 118809-1 (INCLUDED WITH THIS TOOL).
- 2 STROKE .750 INCHES NOMINAL  
PULL CAPACITY AT  
5400 PSI, 7000 LBS  
PULL CAPACITY AT  
8000 PSI = 10360 LBS
- 3 SERVICE KIT P/N 2502/2503KIT AVAILABLE FOR THIS TOOL.
- 4 POLYSEAL INSTALLATION TOOL P/N 505940 AVAILABLE FOR THIS TOOL.
- 5 TO LIMIT STROKE TO .625 USE STROKE LIMITER KIT P/N 120752
- 6 TO LIMIT STROKE TO .500 USE STROKE LIMITER KIT P/N 120752-1.
- 7 ASSEMBLE AND TEST PER HUCK SPEC 42-500.
8. PRINT THE FOLLOWING VALUES ON STICKER 903531 IN  
INDELEIBLE INK .8400 PSI, 580 BAR  
CROSS OUT SCFM, L/M, & GPM BLOCKS AS SHOWN.

① Ⓢ PRINT THE FOLLOWING VALUES ON STICKER 590351 IN INDELIBLE INK. 8400 PSI, 580 BAR CROSS OUT SCFM, L/M, & GPM BLOCKS AS SHOWN.


[illegible]

REV	DESCRIPTION	DATE
H	DEFLECTOR 12020 WAS 11889	07/07/82
J	NEW STICKERS ADDED, 590240-1 WAS 590240	07/30/90
	59060 WAS 59047	

## NOTES



- 1 FOR LONG PINTAIL FASTENERS, USE DEFLECTOR P/N 118809-1 (INCLUDED WITH THIS TOOL).
- 2 STROKE .750 INCHES NOMINAL  
PULL CAPACITY AT  
5400 PSI 7000 LBS  
PULL CAPACITY AT  
8000 PSI 10360 LBS
- 3 SERVICE KIT P/N 2502/2503KIT AVAILABLE FOR THIS TOOL.
- 4 POLYSEAL INSTALLATION TOOL P/N 505940 AVAILABLE FOR THIS TOOL.
- 5 TO LIMIT STROKE TO .625 USE STROKE LIMITER KIT P/N 120752
- 6 TO LIMIT STROKE TO .500 USE STROKE LIMITER KIT P/N 120752-1
- 7 ASSEMBLE AND TEST PER HUCK SPEC 42-500

① B. PRINT THE FOLLOWING VALUES ON STICKER 590351 IN INDELEIBLE INK: 8400 PSI, 580 BAR, CROSS OUT SCFM, L/M, & GPM BLOCKS AS SHOWN

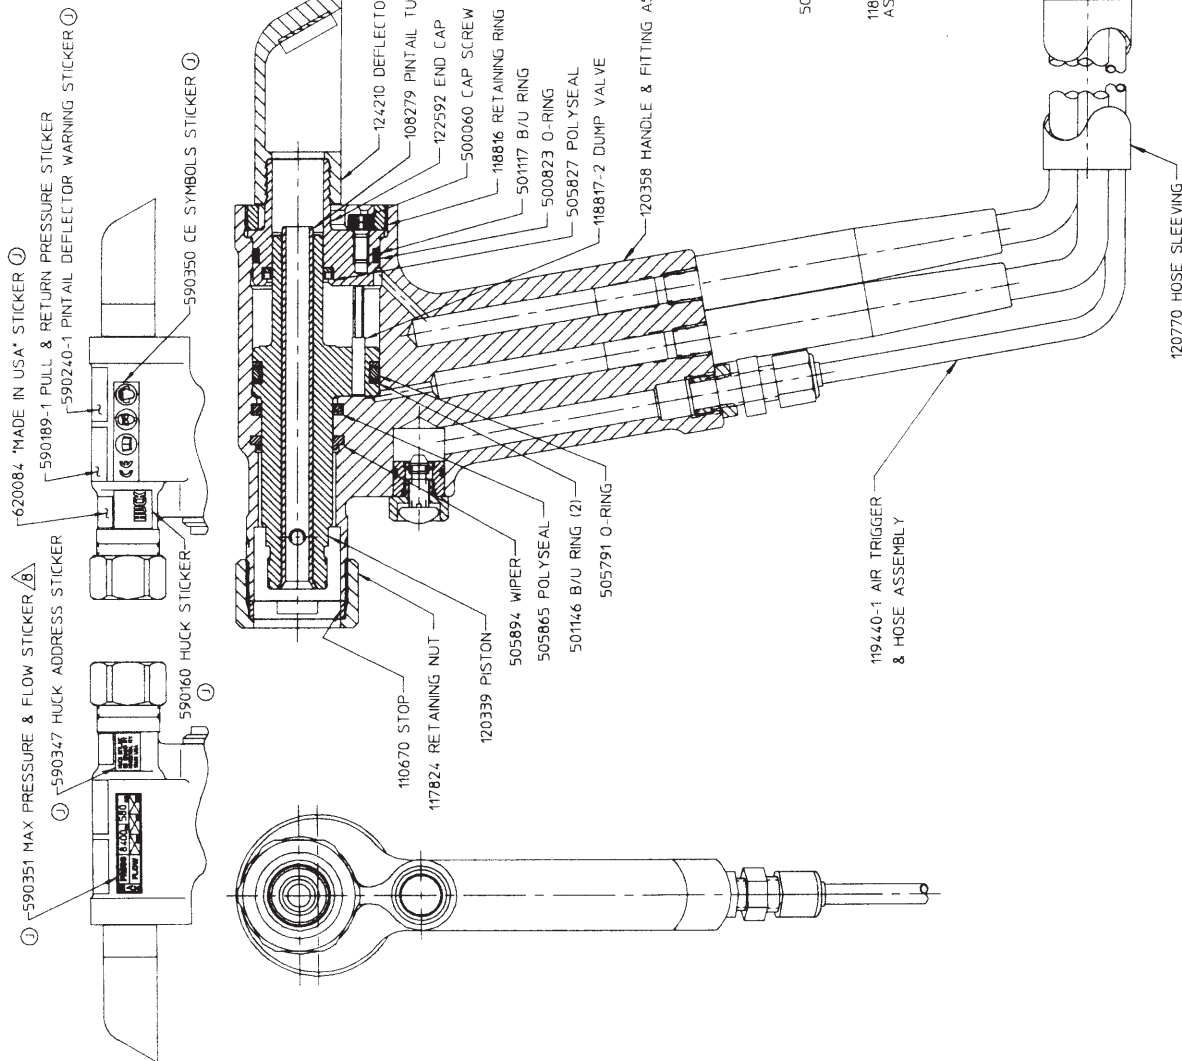

FORM 1000, REV. C		By accepting the proprietary huck drawing, recipient agrees not to reproduce or disclose any part thereof in any other patent or other publication of huck international, inc.	
MATERIAL	SPEC	RAW OR STOCK STATE	RAW OR STOCK STATE
HARDNESS			
HEAT TREAT TO			
SURFACE TREAT			
SURFACE FINISH NOT TO EXCEED	Rz		
IDENTIFICATION PER SPEC 42-311	★		
SURFACES TO BE	0 // 1.1	WITHIN	TIR
TOLERANCES UNLESS OTHERWISE SPECIFIED ARE IN INCHES		TOLERANCES UNLESS OTHERWISE SPECIFIED ARE IN MILLIMETERS	
FRACTIONS		DECIMALS	
1/8	0.125	1/16	0.0625
1/4	0.250	1/32	0.03125
3/8	0.375	1/64	0.015625
1/2	0.500	3/32	0.09375
5/8	0.625	1/8	0.125
3/4	0.750	3/16	0.1875
7/8	0.875	1/4	0.250
1	1.000	1/2	0.500
1 1/8	1.125	3/4	0.750
1 1/4	1.250	1	1.000
1 1/2	1.500	1 1/4	1.125
1 3/4	1.750	1 1/2	1.500
2	2.000	1 3/4	1.750
2 1/4	2.250	2	2.000
2 1/2	2.500	2 1/4	2.250
2 3/4	2.750	2 1/2	2.500
3	3.000	2 3/4	2.750
3 1/4	3.250	3	3.000
3 1/2	3.500	3 1/4	3.250
3 3/4	3.750	3 1/2	3.500
4	4.000	3 3/4	3.750
4 1/4	4.250	4	4.000
4 1/2	4.500	4 1/4	4.250
4 3/4	4.750	4 1/2	4.500
5	5.000	4 3/4	4.750
5 1/4	5.250	5	5.000
5 1/2	5.500	5 1/4	5.250
5 3/4	5.750	5 1/2	5.500
6	6.000	5 3/4	5.750
6 1/4	6.250	6	6.000
6 1/2	6.500	6 1/4	6.250
6 3/4	6.750	6 1/2	6.500
7	7.000	6 3/4	6.750
7 1/4	7.250	7	7.000
7 1/2	7.500	7 1/4	7.250
7 3/4	7.750	7 1/2	7.500
8	8.000	7 3/4	7.750
8 1/4	8.250	8	8.000
8 1/2	8.500	8 1/4	8.250
8 3/4	8.750	8 1/2	8.500
9	9.000	8 3/4	8.750
9 1/4	9.250	9	9.000
9 1/2	9.500	9 1/4	9.250
9 3/4	9.750	9 1/2	9.500
10	10.000	9 3/4	9.750
10 1/4	10.250	10	10.000
10 1/2	10.500	10 1/4	10.250
10 3/4	10.750	10 1/2	10.500
11	11.000	10 3/4	10.750
11 1/4	11.250	11	11.000
11 1/2	11.500	11 1/4	11.250
11 3/4	11.750	11 1/2	11.500
12	12.000	11 3/4	11.750
12 1/4	12.250	12	12.000
12 1/2	12.500	12 1/4	12.250
12 3/4	12.750	12 1/2	12.500
13	13.000	12 3/4	12.750
13 1/4	13.250	13	13.000
13 1/2	13.500	13 1/4	13.250
13 3/4	13.750	13 1/2	13.500
14	14.000	13 3/4	13.750
14 1/4	14.250	14	14.000
14 1/2	14.500	14 1/4	14.250
14 3/4	14.750	14 1/2	14.500
15	15.000	14 3/4	14.750
15 1/4	15.250	15	15.000
15 1/2	15.500	15 1/4	15.250
15 3/4	15.750	15 1/2	15.500
16	16.000	15 3/4	15.750
16 1/4	16.250	16	16.000
16 1/2	16.500	16 1/4	16.250
16 3/4	16.750	16 1/2	16.500
17	17.000	16 3/4	16.750
17 1/4	17.250	17	17.000
17 1/2	17.500	17 1/4	17.250
17 3/4	17.750	17 1/2	17.500
18	18.000	17 3/4	17.750
18 1/4	18.250	18	18.000
18 1/2	18.500	18 1/4	18.250
18 3/4	18.750	18 1/2	18.500
19	19.000	18 3/4	18.750
19 1/4	19.250	19	19.000
19 1/2	19.500	19 1/4	19.250
19 3/4	19.750	19 1/2	19.500
20	20.000	19 3/4	19.750
20 1/4	20.250	20	20.000
20 1/2	20.500	20 1/4	20.250
20 3/4	20.750	20 1/2	20.500
21	21.000	20 3/4	20.750
21 1/4	21.250	21	21.000
21 1/2	21.500	21 1/4	21.250
21 3/4	21.750	21 1/2	21.500
22	22.000	21 3/4	21.750
22 1/4	22.250	22	22.000
22 1/2	22.500	22 1/4	22.250
22 3/4	22.750	22 1/2	22.500
23	23.000	22 3/4	22.750
23 1/4	23.250	23	23.000
23 1/2	23.500	23 1/4	23.250
23 3/4	23.750	23 1/2	23.500
24	24.000	23 3/4	23.750
24 1/4	24.250	24	24.000
24 1/2	24.500	24 1/4	24.250
24 3/4	24.750	24 1/2	24.500
25	25.000	24 3/4	24.750
25 1/4	25.250	25	25.000
25 1/2	25.500	25 1/4	25.250
25 3/4	25.750	25 1/2	25.500
26	26.000	25 3/4	25.750
26 1/4	26.250	26	26.000
26 1/2	26.500	26 1/4	26.250
26 3/4	26.750	26 1/2	26.500
27	27.000	26 3/4	26.750
27 1/4	27.250	27	27.000
27 1/2	27.500	27 1/4	27.250
27 3/4	27.750	27 1/2	27.500
28	28.000	27 3/4	27.750
28 1/4	28.250	28	28.000
28 1/2	28.500	28 1/4	28.250
28 3/4	28.750	28 1/2	28.500
29	29.000	28 3/4	28.750
29 1/4	29.250	29	29.000
29 1/2	29.500	29 1/4	29.250
29 3/4	29.750	29 1/2	29.500
30	30.000	29 3/4	29.750
30 1/4	30.250	30	30.000
30 1/2	30.500	30 1/4	30.250
30 3/4	30.750	30 1/2	30.500
31	31.000	30 3/4	30.750
31 1/4	31.250	31	31.000
31 1/2	31.500	31 1/4	31.250
31 3/4	31.750	31 1/2	31.500
32	32.000	31 3/4	31.750
32 1/4	32.250	32	32.000
32 1/2	32.500	32 1/4	32.250
32 3/4	32.750	32 1/2	32.500
33	33.000	32 3/4	32.750
33 1/4	33.250	33	33.000
33 1/2	33.500	33 1/4	33.250
33 3/4	33.750	33 1/2	33.500
34	34.000	33 3/4	33.750
34 1/4	34.250	34	34.000
34 1/2	34.500	34 1/4	34.250
34 3/4	34.750	34 1/2	34.500
35	35.000	34 3/4	34.750
35 1/4	35.250	35	35.000
35 1/2	35.500	35 1/4	35.250
35 3/4	35.750	35 1/2	35.500
36	36.000	35 3/4	35.750
36 1/4	36.250	36	36.000
36 1/2	36.500	36 1/4	36.250
36 3/4	36.750	36 1/2	36.500
37	37.000	36 3/4	36.750
37 1/4	37.250	37	37.000
37 1/2	37.500	37 1/4	37.250
37 3/4	37.750	37 1/2	37.500
38	38.000	37 3/4	37.750
38 1/4	38.250	38	38.000
38 1/2	38.500	38 1/4	38.250
38 3/4	38.750	38 1/2	38.500
39	39.000	38 3/4	38.750
39 1/4	39.250	39	39.000
39 1/2	39.500	39 1/4	39.250
39 3/4	39.750	39 1/2	39.500
40	40.000	39 3/4	39.750
40 1/4	40.250	40	40.000
40 1/2	40.500	40 1/4	40.250
40 3/4	40.750	40 1/2	40.500
41	41.000	40 3/4	40.750
41 1/4	41.250	41	41.000
41 1/2	41.500	41 1/4	41.250
41 3/4	41.750	41 1/2	41.500
42	42.000	41 3/4	41.750
42 1/4	42.250	42	42.000
42 1/2	42.500	42 1/4	42.250
42 3/4	42.750	42 1/2	42.500
43	43.000	42 3/4	42.750
43 1/4	43.250	43	43.000
43 1/2	43.500	43 1/4	43.250
43 3/4	43.750	43 1/2	43.500
44	44.000	43 3/4	43.750
44 1/4	44.250	44	44.000
44 1/2	44.500	44 1/4	44.250
44 3/4	44.750	44 1/2	44.500
45	45.000	44 3/4	44.750
45 1/4	45.250	45	45.000
45 1/2	45.500	45 1/4	45.250
45 3/4	45.750	45 1/2	45.500
46	46.000	45 3/4	45.750
46 1/4	46.250	46	46.000
46 1/2	46.500	46 1/4	46.250
46 3/4	46.750	46 1/2	46.500
47	47.000	46 3/4	46.750
47 1/4	47.250	47	47.000
47 1/2	47.500	47 1/4	47.250
47 3/4	47.750	47 1/2	47.500
48	48.000	47 3/4	47.750
48 1/4	48.250	48	48.000
48 1/2	48.500	48 1/4	48.250
48 3/4	48.750	48 1/2	48.500
49	49.000	48 3/4	48.750
49 1/4	49.250	49	49.000
49 1/2	49.500	49 1/4	49.250
49 3/4	49.750	49 1/2	49.500
50	50.000	49 3/4	49.750
50 1/4	50.250	50	50.000
50 1/2	50.500	50 1/4	50.250
50 3/4	50.750	50 1/2	50.500
51	51.000	50 3/4	50.750
51 1/4	51.250	51	51.000
51 1/2	51.500	51 1/4	51.250
51 3/4	51.750	51 1/2	51.500
52	52.000	51 3/4	51.750
52 1/4	52.250	52	52.000
52 1/2	52.500	52 1/4	52.250
52 3/4	52.750	52 1/2	52.500
53	53.000	52 3/4	52.750
53 1/4	53.250	53	53.000
53 1/2	53.500	53 1/4	53.250
53 3/4	53.750	53 1/2	53.500
54	54.000	53 3/4	53.750
54 1/4	54.250	54	54.000
54 1/2	54.500	54 1/4	54.250
54 3/4	54.750	54 1/2	54.500
55	55.000	54 3/4	54.750
55 1/4	55.250	55	55.000
55 1/2	55.500	55 1/4	55.250
55 3/4	55.750	55 1/2	55.500
56	56.000	55 3/4	55.750
56 1/4	56.250	56	56.000</


REV	DESCRIPTION	DATE
A	RELEASE	04/22/96
B	NEW STICKERS ADDED, 590240-1 WAS 590240, 590600 WAS 590247	05/30/96

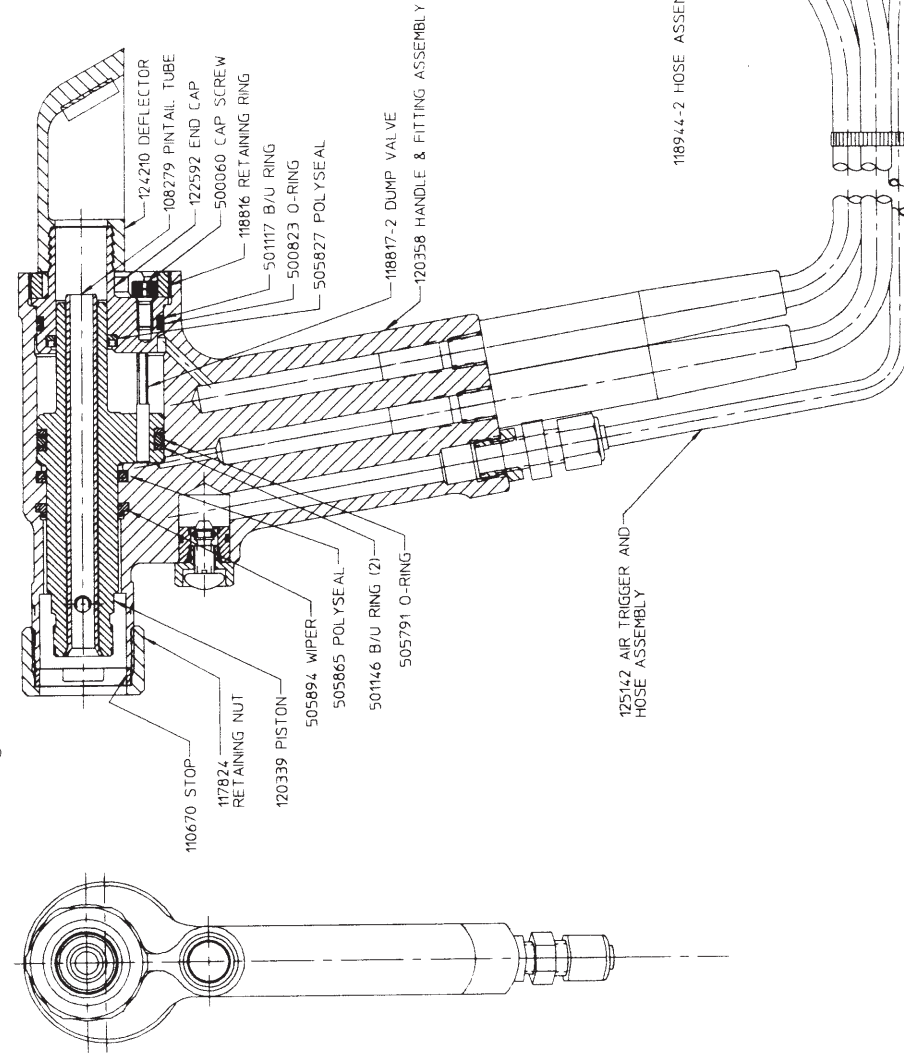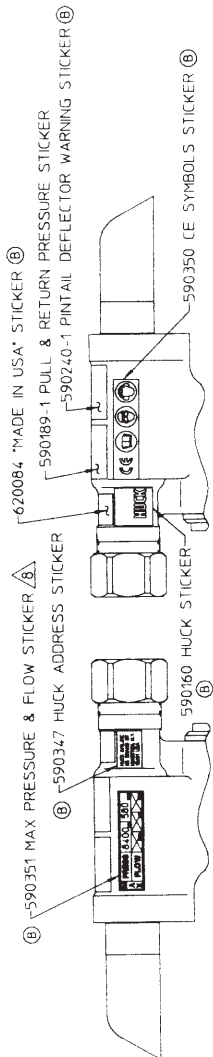


## NOTES:

- 1 FOR LONG PINTAIL FASTENERS, USE DEFLECTOR P/N 118809-1 INCLUDED WITH THIS TOOL.
- 2 STROKE .750 INCHES NOMINAL  
PULL CAPACITY AT  
5400 PSI : 7000 LBS  
PULL CAPACITY AT  
8000 PSI : 10360 LBS
- 3 SERVICE KIT P/N 2502/2503KIT AVAILABLE FOR THIS TOOL.
- 4 POLYSEAL INSTALLATION TOOL P/N 505940 AVAILABLE FOR THIS TOOL.
- 5 TO LIMIT STROKE TO .625 USE STROKE LIMITER KIT P/N 120752
- 6 TO LIMIT STROKE TO .500 USE STROKE LIMITER KIT P/N 120752-1.
- 7 ASSEMBLE AND TEST PER HUCK SPEC 42-500.



(B) PRINT THE FOLLOWING VALUES ON STICKER P/N 590351 IN INDELEIBLE INK: 8400 PSI, 580 BAR, CROSS OUT SCFH, L/H, & GPH BLOCKS AS SHOWN.

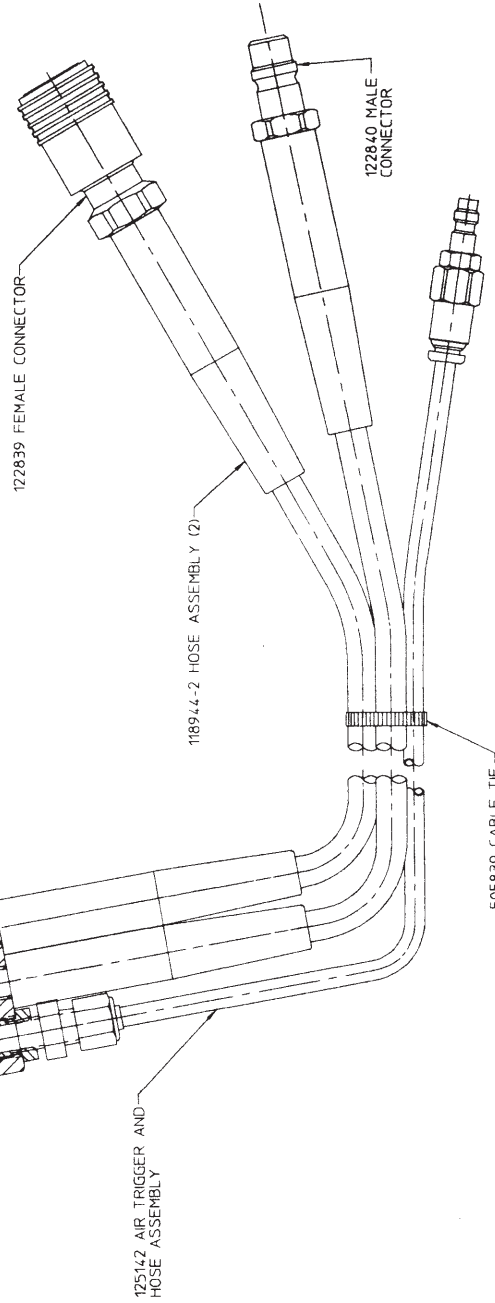

FORM REV. REV. C		By accepting the proprietary tool drawing, recipient agrees not to reproduce or disclose any part thereof to any other without the written permission of Huck International Inc.	
MATERIAL	SPEC	DATE	SCALE
HARDNESS	RAW OR STOCKED STATE	04/22/96	1:1
HEAT TREAT	SPEC	04/22/96	1:1
SURFACE TREAT	SPEC	04/22/96	1:1
SURFACE FINISH NOT TO EXCEED	Rq	04/22/96	1:1
IDENTIFICATION PER SPEC 42-311	★	04/22/96	1:1
SURFACES TO BE	0 .001 .002 .003 .004 .005 .006 .007 .008 .009 .010 .011 .012 .013 .014 .015 .016 .017 .018 .019 .020 .021 .022 .023 .024 .025 .026 .027 .028 .029 .030 .031 .032 .033 .034 .035 .036 .037 .038 .039 .040 .041 .042 .043 .044 .045 .046 .047 .048 .049 .050 .051 .052 .053 .054 .055 .056 .057 .058 .059 .060 .061 .062 .063 .064 .065 .066 .067 .068 .069 .070 .071 .072 .073 .074 .075 .076 .077 .078 .079 .080 .081 .082 .083 .084 .085 .086 .087 .088 .089 .090 .091 .092 .093 .094 .095 .096 .097 .098 .099 .100 .101 .102 .103 .104 .105 .106 .107 .108 .109 .110 .111 .112 .113 .114 .115 .116 .117 .118 .119 .120 .121 .122 .123 .124 .125 .126 .127 .128 .129 .130 .131 .132 .133 .134 .135 .136 .137 .138 .139 .140 .141 .142 .143 .144 .145 .146 .147 .148 .149 .150 .151 .152 .153 .154 .155 .156 .157 .158 .159 .160 .161 .162 .163 .164 .165 .166 .167 .168 .169 .170 .171 .172 .173 .174 .175 .176 .177 .178 .179 .180 .181 .182 .183 .184 .185 .186 .187 .188 .189 .190 .191 .192 .193 .194 .195 .196 .197 .198 .199 .200 .201 .202 .203 .204 .205 .206 .207 .208 .209 .210 .211 .212 .213 .214 .215 .216 .217 .218 .219 .220 .221 .222 .223 .224 .225 .226 .227 .228 .229 .230 .231 .232 .233 .234 .235 .236 .237 .238 .239 .240 .241 .242 .243 .244 .245 .246 .247 .248 .249 .250 .251 .252 .253 .254 .255 .256 .257 .258 .259 .260 .261 .262 .263 .264 .265 .266 .267 .268 .269 .270 .271 .272 .273 .274 .275 .276 .277 .278 .279 .280 .281 .282 .283 .284 .285 .286 .287 .288 .289 .290 .291 .292 .293 .294 .295 .296 .297 .298 .299 .300 .301 .302 .303 .304 .305 .306 .307 .308 .309 .310 .311 .312 .313 .314 .315 .316 .317 .318 .319 .320 .321 .322 .323 .324 .325 .326 .327 .328 .329 .330 .331 .332 .333 .334 .335 .336 .337 .338 .339 .340 .341 .342 .343 .344 .345 .346 .347 .348 .349 .350 .351 .352 .353 .354 .355 .356 .357 .358 .359 .360 .361 .362 .363 .364 .365 .366 .367 .368 .369 .370 .371 .372 .373 .374 .375 .376 .377 .378 .379 .380 .381 .382 .383 .384 .385 .386 .387 .388 .389 .390 .391 .392 .393 .394 .395 .396 .397 .398 .399 .400 .401 .402 .403 .404 .405 .406 .407 .408 .409 .410 .411 .412 .413 .414 .415 .416 .417 .418 .419 .420 .421 .422 .423 .424 .425 .426 .427 .428 .429 .430 .431 .432 .433 .434 .435 .436 .437 .438 .439 .440 .441 .442 .443 .444 .445 .446 .447 .448 .449 .450 .451 .452 .453 .454 .455 .456 .457 .458 .459 .460 .461 .462 .463 .464 .465 .466 .467 .468 .469 .470 .471 .472 .473 .474 .475 .476 .477 .478 .479 .480 .481 .482 .483 .484 .485 .486 .487 .488 .489 .490 .491 .492 .493 .494 .495 .496 .497 .498 .499 .500 .501 .502 .503 .504 .505 .506 .507 .508 .509 .510 .511 .512 .513 .514 .515 .516 .517 .518 .519 .520 .521 .522 .523 .524 .525 .526 .527 .528 .529 .530 .531 .532 .533 .534 .535 .536 .537 .538 .539 .540 .541 .542 .543 .544 .545 .546 .547 .548 .549 .550 .551 .552 .553 .554 .555 .556 .557 .558 .559 .560 .561 .562 .563 .564 .565 .566 .567 .568 .569 .570 .571 .572 .573 .574 .575 .576 .577 .578 .579 .580 .581 .582 .583 .584 .585 .586 .587 .588 .589 .590 .591 .592 .593 .594 .595 .596 .597 .598 .599 .600 .601 .602 .603 .604 .605 .606 .607 .608 .609 .610 .611 .612 .613 .614 .615 .616 .617 .618 .619 .620 .621 .622 .623 .624 .625 .626 .627 .628 .629 .630 .631 .632 .633 .634 .635 .636 .637 .638 .639 .640 .641 .642 .643 .644 .645 .646 .647 .648 .649 .650 .651 .652 .653 .654 .655 .656 .657 .658 .659 .660 .661 .662 .663 .664 .665 .666 .667 .668 .669 .670 .671 .672 .673 .674 .675 .676 .677 .678 .679 .680 .681 .682 .683 .684 .685 .686 .687 .688 .689 .690 .691 .692 .693 .694 .695 .696 .697 .698 .699 .700 .701 .702 .703 .704 .705 .706 .707 .708 .709 .710 .711 .712 .713 .714 .715 .716 .717 .718 .719 .720 .721 .722 .723 .724 .725 .726 .727 .728 .729 .730 .731 .732 .733 .734 .735 .736 .737 .738 .739 .740 .741 .742 .743 .744 .745 .746 .747 .748 .749 .750 .751 .752 .753 .754 .755 .756 .757 .758 .759 .760 .761 .762 .763 .764 .765 .766 .767 .768 .769 .770 .771 .772 .773 .774 .775 .776 .777 .778 .779 .780 .781 .782 .783 .784 .785 .786 .787 .788 .789 .790 .791 .792 .793 .794 .795 .796 .797 .798 .799 .800 .801 .802 .803 .804 .805 .806 .807 .808 .809 .810 .811 .812 .813 .814 .815 .816 .817 .818 .819 .820 .821 .822 .823 .824 .825 .826 .827 .828 .829 .830 .831 .832 .833 .834 .835 .836 .837 .838 .839 .840 .841 .842 .843 .844 .845 .846 .847 .848 .849 .850 .851 .852 .853 .854 .855 .856 .857 .858 .859 .860 .861 .862 .863 .864 .865 .866 .867 .868 .869 .870 .871 .872 .873 .874 .875 .876 .877 .878 .879 .880 .881 .882 .883 .884 .885 .886 .887 .888 .889 .890 .891 .892 .893 .894 .895 .896 .897 .898 .899 .900 .901 .902 .903 .904 .905 .906 .907 .908 .909 .910 .911 .912 .913 .914 .915 .916 .917 .918 .919 .920 .921 .922 .923 .924 .925 .926 .927 .928 .929 .930 .931 .932 .933 .934 .935 .936 .937 .938 .939 .940 .941 .942 .943 .944 .945 .946 .947 .948 .949 .950 .951 .952 .953 .954 .955 .956 .957 .958 .959 .960 .961 .962 .963 .964 .965 .966 .967 .968 .969 .970 .971 .972 .973 .974 .975 .976 .977 .978 .979 .980 .981 .982 .983 .984 .985 .986 .987 .988 .989 .990 .991 .992 .993 .994 .995 .996 .997 .998 .999 .1000	0 .001 .002 .003 .004 .005 .006 .007 .008 .009 .010 .011 .012 .013 .014 .015 .016 .017 .018 .019 .020 .021 .022 .023 .024 .025 .026 .027 .028 .029 .030 .031 .032 .033 .034 .035 .036 .037 .038 .039 .040 .041 .042 .043 .044 .045 .046 .047 .048 .049 .050 .051 .052 .053 .054 .055 .056 .057 .058 .059 .060 .061 .062 .063 .064 .065 .066 .067 .068 .069 .070 .071 .072 .073 .074 .075 .076 .077 .078 .079 .080 .081 .082 .083 .084 .085 .086 .087 .088 .089 .090 .091 .092 .093 .094 .095 .096 .097 .098 .099 .100 .101 .102 .103 .104 .105 .106 .107 .108 .109 .110 .111 .112 .113 .114 .115 .116 .117 .118 .119 .120 .121 .122 .123 .124 .125 .126 .127 .128 .129 .130 .131 .132 .133 .134 .135 .136 .137 .138 .139 .140 .141 .142 .143 .144 .145 .146 .147 .148 .149 .150 .151 .152 .153 .154 .155 .156 .157 .158 .159 .160 .161 .162 .163 .164 .165 .166 .167 .168 .169 .170 .171 .172 .173 .174 .175 .176 .177 .178 .179 .180 .181 .182 .183 .184 .185 .186 .187 .188 .189 .190 .191 .192 .193 .194 .195 .196 .197 .198 .199 .200 .201 .202 .203 .204 .205 .206 .207 .208 .209 .210 .211 .212 .213 .214 .215 .216 .217 .218 .219 .220 .221 .222 .223 .224 .225 .226 .227 .228 .229 .230 .231 .232 .233 .234 .235 .236 .237 .238 .239 .240 .241 .242 .243 .244 .245 .246 .247 .248 .249 .250 .251 .252 .253 .254 .255 .256 .257 .258 .259 .260 .261 .262 .263 .264 .265 .266 .267 .268 .269 .270 .271 .272 .273 .274 .275 .276 .277 .278 .279 .280 .281 .282 .283 .284 .285 .286 .287 .288 .289 .290 .291 .292 .293 .294 .295 .296 .297 .298 .299 .300 .301 .302 .303 .304 .305 .306 .307 .308 .309 .310 .311 .312 .313 .314 .315 .316 .317 .318 .319 .320 .321 .322 .323 .324 .325 .326 .327 .328 .329 .330 .331 .332 .333 .334 .335 .336 .337 .338 .339 .340 .341 .342 .343 .344 .345 .346 .347 .348 .349 .350 .351 .352 .353 .354 .355 .356 .357 .358 .359 .360 .361 .362 .363 .364 .365 .366 .367 .368 .369 .370 .371 .372 .373 .374 .375 .376 .377 .378 .379 .380 .381 .382 .383 .384 .385 .386 .387 .388 .389 .390 .391 .392 .393 .394 .395 .396 .397 .398 .399 .400 .401 .402 .403 .404 .405 .406 .407 .408 .409 .410 .411 .412 .413 .414 .415 .416 .417 .418 .419 .420 .421 .422 .423 .424 .425 .426 .427 .428 .429 .430 .431 .432 .433 .434 .435 .436 .437 .438 .439 .440 .441 .442 .443 .444 .445 .446 .447 .448 .449 .450 .451 .452 .453 .454 .455 .456 .457 .458 .459 .460 .461 .462 .463 .464 .465 .466 .467 .468 .469 .470 .471 .472 .473 .474 .475 .476 .477 .478 .479 .480 .481 .482 .483 .484 .485 .486 .487 .488 .489 .490 .491 .492 .493 .494 .495 .496 .497 .498 .499 .500 .501 .502 .503 .504 .505 .506 .507 .508 .509 .510 .511 .512 .513 .514 .515 .516 .517 .518 .519 .520 .521 .522 .523 .524 .525 .526 .527 .528 .529 .530 .531 .532 .533 .534 .535 .536 .537 .538 .539 .540 .541 .542 .543 .544 .545 .546 .547 .548 .549 .550 .551 .552 .553 .554 .555 .556 .557 .558 .559 .560 .561 .562 .563 .564 .565 .566 .567 .568 .569 .570 .571 .572 .573 .574 .575 .576 .577 .578 .579 .580 .581 .582 .583 .584 .585 .586 .587 .588 .589 .590 .591 .592 .593 .594 .595 .596 .597 .598 .599 .600 .601 .602 .603 .604 .605 .606 .607 .608 .609 .610 .611 .612 .613 .614 .615 .616 .617 .618 .619 .620 .621 .622 .623 .624 .625 .626 .627 .628 .629 .630 .631 .632 .633 .634 .635 .636 .637 .638 .639 .640 .641 .642 .643 .644 .645 .646 .647 .648 .649 .650 .651 .652 .653 .654 .655 .656 .657 .658 .659 .660 .661 .662 .663 .664 .665 .666 .667 .668 .669 .670 .671 .672 .673 .674 .675 .676 .677 .678 .679 .680 .681 .682 .683 .684 .685 .686 .687 .688 .689 .690 .691 .692 .693 .694 .695 .696 .697 .698 .699 .700 .701 .702 .703 .704 .705 .706 .707 .708 .709 .710 .711 .712 .713 .714 .715 .716 .717 .718 .719 .720 .721 .722 .723 .724 .725 .726 .727 .728 .729 .730 .731 .732 .733 .734 .735 .736 .737 .738 .739 .740 .741 .742 .743 .744 .745 .746 .747 .748 .749 .750 .751 .752 .753 .754 .755 .756 .757 .758 .759 .760 .761 .762 .763 .764 .765 .766 .767 .768 .769 .770 .771 .772 .773 .774 .775 .776 .777 .778 .779 .780 .781 .782 .783 .784 .785 .786 .787 .788 .789 .790 .791 .792 .793 .794 .795 .796 .797 .798 .799 .800 .801 .802 .803 .804 .805 .806 .807 .808 .809 .810 .811 .812 .813 .814 .815 .816 .817 .818 .819 .820 .821 .822 .823 .824 .825 .826 .827 .828 .829 .830 .831 .832 .833 .834 .835 .836 .837 .838 .839 .840 .841 .842 .843 .844 .845 .846 .847 .848 .849 .850 .851 .852 .853 .854 .855 .856 .857 .858 .859 .860 .861 .862 .863 .864 .865 .866 .867 .868 .869 .870 .871 .872 .873 .874 .875 .876 .877 .878 .879 .880 .881 .882 .883 .884 .885 .886 .887 .888 .889 .890 .891 .892 .893 .894 .895 .896 .897 .898 .899 .900 .901 .902 .903 .904 .905 .906 .907 .908 .909 .910 .911 .912 .913 .914 .915 .916 .917 .918 .919 .920 .921 .922 .923 .924 .925 .926 .927 .928 .929 .930 .931 .932 .933 .934 .935 .936 .937 .938 .939 .940 .941 .942 .943 .944 .945 .946 .947 .948 .949 .950 .951 .952 .953 .954 .955 .956 .957 .958 .959 .960 .961 .962 .963 .964 .965 .966 .967 .968 .969 .970 .971 .972 .973 .974 .975 .976 .977 .978 .979 .980 .981 .982 .983 .984 .985 .986 .987 .988 .989 .990 .991 .992 .993 .994 .995 .996 .997 .998 .999 .1000	0 .001 .002 .003 .004 .005 .006 .007 .008 .009 .010 .011 .012 .013 .014 .015 .016 .017 .018 .019 .020 .021 .022 .023 .024 .025 .026 .027 .028 .029 .030 .031 .032 .033 .034 .035 .036 .037 .038 .039 .040 .041 .042 .043 .044 .045 .046 .047 .048 .049 .050 .051 .052 .053 .054 .055 .056 .057 .058 .059 .060 .061 .062 .063 .064 .065 .066 .067 .068 .069 .070 .071 .072 .073 .074 .075 .076 .077 .078 .079 .080 .081 .082 .083 .084 .085 .086 .087 .088 .089 .090 .091 .092 .093 .094 .095 .096 .097 .098 .099 .100 .101 .102 .103 .104 .105 .106 .107 .108 .109 .110 .111 .112 .113 .114 .115 .116 .117 .118 .119 .120 .121 .122 .123 .124 .125 .126 .127 .128 .129 .130 .131 .132 .133 .134 .135 .136 .137 .138 .139 .140 .141 .142 .143 .144 .145 .146 .147 .148 .149 .150 .151 .152 .153 .154 .155 .156 .157 .158 .159 .160 .161 .162 .163 .164 .165 .166 .167 .168 .169 .170 .171 .172 .173 .174 .175 .176 .177 .178 .179 .180 .181 .182 .183 .184 .185 .186 .187 .188 .189 .190 .191 .192 .193 .194 .195 .196 .197 .198 .199 .200 .201 .202 .203 .204 .205 .206 .207 .208 .209 .210 .211 .212 .213 .214 .215 .216 .217 .218 .219 .220 .221 .222 .223 .224 .225 .226 .227 .228 .229 .230 .231 .232 .233 .234 .235 .236 .237 .238 .239 .240 .241 .242 .243 .244 .245 .246 .247 .248 .249 .250 .251 .252 .253 .254 .255 .256 .257 .258 .259 .260 .261 .262 .263 .264 .265 .266 .267 .268 .269 .270 .271 .272 .273 .274 .275 .276 .277 .278 .279 .280 .281 .282 .283 .284 .285 .286 .287 .288 .289 .290 .291 .292 .293 .294 .295 .296 .297 .298 .299 .300 .301 .302 .303 .304 .305 .306 .307 .308 .309 .310 .311 .312 .313 .314 .315 .316 .317 .318 .319 .320 .321 .322 .323 .324 .325 .326 .327 .328 .329 .330 .331 .332 .333 .334 .335 .336 .337 .338 .339 .340 .341 .342 .343 .344 .345 .346 .347 .348 .349 .350 .351 .352 .353 .354 .355 .356 .357 .358 .359 .360 .361 .362 .363 .364 .365 .366 .367 .368 .369 .370 .371 .372 .373 .374 .375 .376 .377 .378 .379 .380 .381 .382 .383 .384 .385 .386 .387 .388 .389 .390 .391 .392 .393 .394 .395 .396 .397 .398 .399 .400 .401 .402 .403 .404 .405 .406 .407 .408 .409 .410 .411 .412 .413 .414 .415 .416 .417 .418 .419 .420 .421 .422 .423 .424 .425 .426 .427 .428 .429 .430 .431 .432 .433 .434 .435 .436 .437 .438 .439 .440 .441 .442 .443 .444 .445 .446 .447 .448 .449 .450 .451 .452 .453 .454 .455 .456 .457 .458 .459 .460 .461 .462 .463 .464 .465 .466 .467 .468 .469 .470 .471 .472 .473 .474 .475 .476 .477 .478 .479 .480 .481 .482 .483 .484 .485 .486 .487 .488 .489 .490 .491 .492 .493 .494 .495 .496 .497 .498 .499 .500 .501 .502 .503 .504 .505 .506 .507 .508 .509 .510 .511 .512 .513 .514 .515 .516 .517 .518 .519 .520 .521 .522 .523 .524 .525 .526 .527 .528 .529 .530 .531 .532 .533 .534 .535 .536 .537 .538 .539 .540 .541 .542 .543 .544 .545 .546 .547 .548 .549 .550 .551 .552 .553 .554 .555 .556 .557 .558 .559 .560 .561 .562 .563 .564 .565 .566 .567 .568 .569 .570 .571 .572 .573 .574 .575 .576 .577 .578 .579 .580 .581 .582 .583 .584 .585 .586 .587 .588 .589 .590 .591 .592 .593 .594 .595 .596 .597 .598 .599 .600 .601 .602 .603 .604 .605 .606 .607 .608 .609 .610 .611 .612 .613 .614 .615 .616 .617 .618 .619 .620 .621 .622 .623 .624 .625 .626 .627 .628 .629 .630 .631 .632 .633 .634 .635 .636 .637 .638 .639 .640 .641 .642 .643 .644 .645 .646 .647 .648 .649 .650 .651 .652 .653 .654 .655 .656 .657 .658 .659 .660 .661 .662 .663 .664 .665 .666 .667 .668 .669 .670 .671 .672 .673 .674 .67

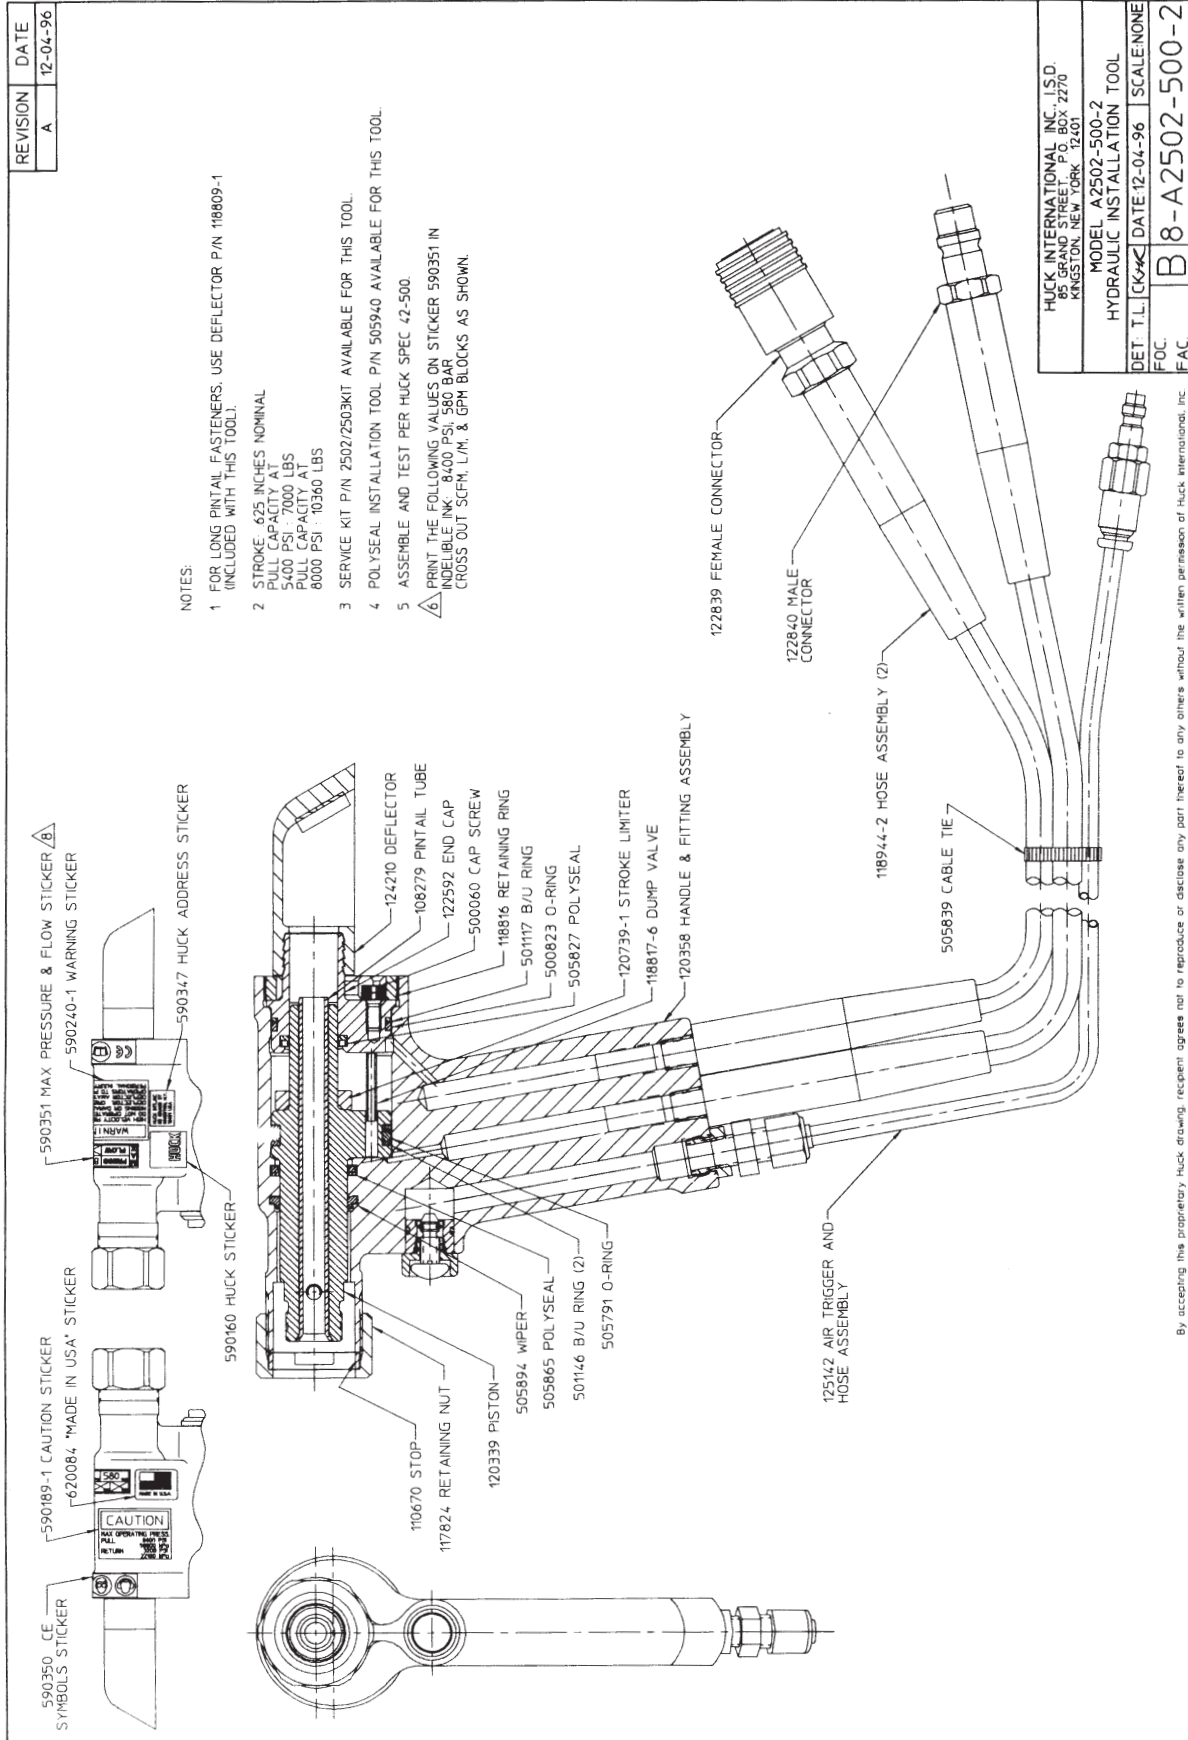

REV	DESCRIPTION	DATE
A	RELEASE	04/22/77
B	NEW STICKERS ADDED, 590240-1 WAS 590240, 590160 WAS 590217	05/30/77

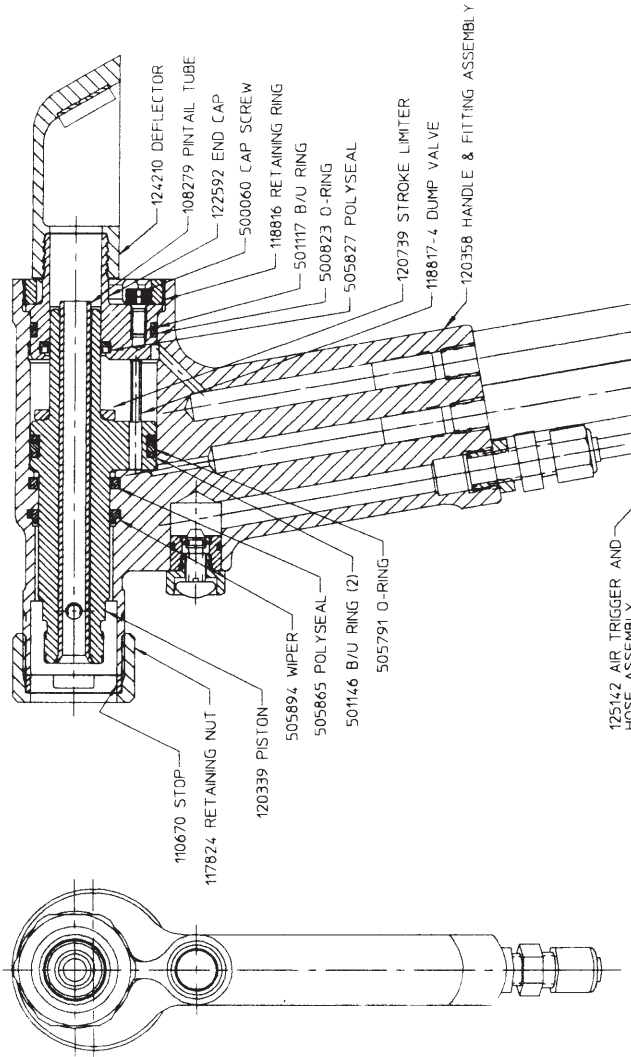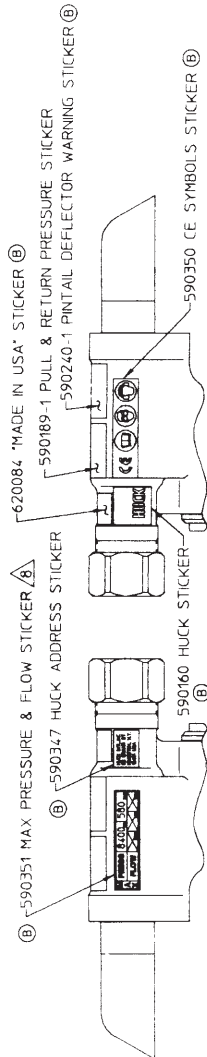

## NOTES

- 1 FOR LONG PINTAIL FASTENERS, USE DEFLECTOR P/N 118809-1 (INCLUDED WITH THIS TOOL).
- 2 STROKE: 625 INCHES NOMINAL  
PULL CAPACITY AT 5400 PSI: 7000 LBS  
PULL CAPACITY AT 8000 PSI: 10360 LBS
- 3 SERVICE KIT P/N 2502/2503KIT AVAILABLE FOR THIS TOOL.
- 4 POLYSEAL INSTALLATION TOOL P/N 505940 AVAILABLE FOR THIS TOOL.
- 5 ASSEMBLE AND TEST PER HUCK SPEC 42-500.

ⓑ PRINT THE FOLLOWING VALUES ON STICKER 590351 IN INDELIBLE INK: 8400 PSI, 580 BAR, CROSS OUT SCFM, L/M, & GPM BLOCKS AS SHOWN.


FORM 850-1 (REV. 1-77)		By accepting this preliminary price quote, the customer agrees not to introduce or become any part involved in any other use of the material without the written permission of Alcoa Fastening Systems, Inc.	
MATERIAL	ALCOA FASTENING SYSTEMS, INC.	SPEC.	HUCK INTERNATIONAL, INC. 1250, 1250-1, 1250-2, 1250-3, 1250-4, 1250-5, 1250-6, 1250-7, 1250-8, 1250-9, 1250-10, 1250-11, 1250-12, 1250-13, 1250-14, 1250-15, 1250-16, 1250-17, 1250-18, 1250-19, 1250-20, 1250-21, 1250-22, 1250-23, 1250-24, 1250-25, 1250-26, 1250-27, 1250-28, 1250-29, 1250-30, 1250-31, 1250-32, 1250-33, 1250-34, 1250-35, 1250-36, 1250-37, 1250-38, 1250-39, 1250-40, 1250-41, 1250-42, 1250-43, 1250-44, 1250-45, 1250-46, 1250-47, 1250-48, 1250-49, 1250-50, 1250-51, 1250-52, 1250-53, 1250-54, 1250-55, 1250-56, 1250-57, 1250-58, 1250-59, 1250-60, 1250-61, 1250-62, 1250-63, 1250-64, 1250-65, 1250-66, 1250-67, 1250-68, 1250-69, 1250-70, 1250-71, 1250-72, 1250-73, 1250-74, 1250-75, 1250-76, 1250-77, 1250-78, 1250-79, 1250-80, 1250-81, 1250-82, 1250-83, 1250-84, 1250-85, 1250-86, 1250-87, 1250-88, 1250-89, 1250-90, 1250-91, 1250-92, 1250-93, 1250-94, 1250-95, 1250-96, 1250-97, 1250-98, 1250-99, 1250-100, 1250-101, 1250-102, 1250-103, 1250-104, 1250-105, 1250-106, 1250-107, 1250-108, 1250-109, 1250-110, 1250-111, 1250-112, 1250-113, 1250-114, 1250-115, 1250-116, 1250-117, 1250-118, 1250-119, 1250-120, 1250-121, 1250-122, 1250-123, 1250-124, 1250-125, 1250-126, 1250-127, 1250-128, 1250-129, 1250-130, 1250-131, 1250-132, 1250-133, 1250-134, 1250-135, 1250-136, 1250-137, 1250-138, 1250-139, 1250-140, 1250-141, 1250-142, 1250-143, 1250-144, 1250-145, 1250-146, 1250-147, 1250-148, 1250-149, 1250-150, 1250-151, 1250-152, 1250-153, 1250-154, 1250-155, 1250-156, 1250-157, 1250-158, 1250-159, 1250-160, 1250-161, 1250-162, 1250-163, 1250-164, 1250-165, 1250-166, 1250-167, 1250-168, 1250-169, 1250-170, 1250-171, 1250-172, 1250-173, 1250-174, 1250-175, 1250-176, 1250-177, 1250-178, 1250-179, 1250-180, 1250-181, 1250-182, 1250-183, 1250-184, 1250-185, 1250-186, 1250-187, 1250-188, 1250-189, 1250-190, 1250-191, 1250-192, 1250-193, 1250-194, 1250-195, 1250-196, 1250-197, 1250-198, 1250-199, 1250-200, 1250-201, 1250-202, 1250-203, 1250-204, 1250-205, 1250-206, 1250-207, 1250-208, 1250-209, 1250-210, 1250-211, 1250-212, 1250-213, 1250-214, 1250-215, 1250-216, 1250-217, 1250-218, 1250-219, 1250-220, 1250-221, 1250-222, 1250-223, 1250-224, 1250-225, 1250-226, 1250-227, 1250-228, 1250-229, 1250-230, 1250-231, 1250-232, 1250-233, 1250-234, 1250-235, 1250-236, 1250-237, 1250-238, 1250-239, 1250-240, 1250-241, 1250-242, 1250-243, 1250-244, 1250-245, 1250-246, 1250-247, 1250-248, 1250-249, 1250-250, 1250-251, 1250-252, 1250-253, 1250-254, 1250-255, 1250-256, 1250-257, 1250-258, 1250-259, 1250-260, 1250-261, 1250-262, 1250-263, 1250-264, 1250-265, 1250-266, 1250-267, 1250-268, 1250-269, 1250-270, 1250-271, 1250-272, 1250-273, 1250-274, 1250-275, 1250-276, 1250-277, 1250-278, 1250-279, 1250-280, 1250-281, 1250-282, 1250-283, 1250-284, 1250-285, 1250-286, 1250-287, 1250-288, 1250-289, 1250-290, 1250-291, 1250-292, 1250-293, 1250-294, 1250-295, 1250-296, 1250-297, 1250-298, 1250-299, 1250-300, 1250-301, 1250-302, 1250-303, 1250-304, 1250-305, 1250-306, 1250-307, 1250-308, 1250-309, 1250-310, 1250-311, 1250-312, 1250-313, 1250-314, 1250-315, 1250-316, 1250-317, 1250-318, 1250-319, 1250-320, 1250-321, 1250-322, 1250-323, 1250-324, 1250-325, 1250-326, 1250-327, 1250-328, 1250-329, 1250-330, 1250-331, 1250-332, 1250-333, 1250-334, 1250-335, 1250-336, 1250-337, 1250-338, 1250-339, 1250-340, 1250-341, 1250-342, 1250-343, 1250-344, 1250-345, 1250-346, 1250-347, 1250-348, 1250-349, 1250-350, 1250-351, 1250-352, 1250-353, 1250-354, 1250-355, 1250-356, 1250-357, 1250-358, 1250-359, 1250-360, 1250-361, 1250-362, 1250-363, 1250-364, 1250-365, 1250-366, 1250-367, 1250-368, 1250-369, 1250-370, 1250-371, 1250-372, 1250-373, 1250-374, 1250-375, 1250-376, 1250-377, 1250-378, 1250-379, 1250-380, 1250-381, 1250-382, 1250-383, 1250-384, 1250-385, 1250-386, 1250-387, 1250-388, 1250-389, 1250-390, 1250-391, 1250-392, 1250-393, 1250-394, 1250-395, 1250-396, 1250-397, 1250-398, 1250-399, 1250-400, 1250-401, 1250-402, 1250-403, 1250-404, 1250-405, 1250-406, 1250-407, 1250-408, 1250-409, 1250-410, 1250-411, 1250-412, 1250-413, 1250-414, 1250-415, 1250-416, 1250-417, 1250-418, 1250-419, 1250-420, 1250-421, 1250-422, 1250-423, 1250-424, 1250-425, 1250-426, 1250-427, 1250-428, 1250-429, 1250-430, 1250-431, 1250-432, 1250-433, 1250-434, 1250-435, 1250-436, 1250-437, 1250-438, 1250-439, 1250-440, 1250-441, 1250-442, 1250-443, 1250-444, 1250-445, 1250-446, 1250-447, 1250-448, 1250-449, 1250-450, 1250-451, 1250-452, 1250-453, 1250-454, 1250-455, 1250-456, 1250-457, 1250-458, 1250-459, 1250-460, 1250-461, 1250-462, 1250-463, 1250-464, 1250-465, 1250-466, 1250-467, 1250-468, 1250-469, 1250-470, 1250-471, 1250-472, 1250-473, 1250-474, 1250-475, 1250-476, 1250-477, 1250-478, 1250-479, 1250-480, 1250-481, 1250-482, 1250-483, 1250-484, 1250-485, 1250-486, 1250-487, 1250-488, 1250-489, 1250-490, 1250-491, 1250-492, 1250-493, 1250-494, 1250-495, 1250-496, 1250-497, 1250-498, 1250-499, 1250-500, 1250-501, 1250-502, 1250-503, 1250-504, 1250-505, 1250-506, 1250-507, 1250-508, 1250-509, 1250-510, 1250-511, 1250-512, 1250-513, 1250-514, 1250-515, 1250-516, 1250-517, 1250-518, 1250-519, 1250-520, 1250-521, 1250-522, 1250-523, 1250-524, 1250-525, 1250-526, 1250-527, 1250-528, 1250-529, 1250-530, 1250-531, 1250-532, 1250-533, 1250-534, 1250-535, 1250-536, 1250-537, 1250-538, 1250-539, 1250-540, 1250-541, 1250-542, 1250-543, 1250-544, 1250-545, 1250-546, 1250-547, 1250-548, 1250-549, 1250-550, 1250-551, 1250-552, 1250-553, 1250-554, 1250-555, 1250-556, 1250-557, 1250-558, 1250-559, 1250-560, 1250-561, 1250-562, 1250-563, 1250-564, 1250-565, 1250-566, 1250-567, 1250-568, 1250-569, 1250-570, 1250-571, 1250-572, 1250-573, 1250-574, 1250-575, 1250-576, 1250-577, 1250-578, 1250-579, 1250-580, 1250-581, 1250-582, 1250-583, 1250-584, 1250-585, 1250-586, 1250-587, 1250-588, 1250-589, 1250-590, 1250-591, 1250-592, 1250-593, 1250-594, 1250-595, 1250-596, 1250-597, 1250-598, 1250-599, 1250-600, 1250-601, 1250-602, 1250-603, 1250-604, 1250-605, 1250-606, 1250-607, 1250-608, 1250-609, 1250-610, 1250-611, 1250-612, 1250-613, 1250-614, 1250-615, 1250-616, 1250-617, 1250-618, 1250-619, 1250-620, 1250-621, 1250-622, 1250-623, 1250-624, 1250-625, 1250-626, 1250-627, 1250-628, 1250-629, 1250-630, 1250-631, 1250-632, 1250-633, 1250-634, 1250-635, 1250-636, 1250-637, 1250-638, 1250-639, 1250-640, 1250-641, 1250-642, 1250-643, 1250-644, 1250-645, 1250-646, 1250-647, 1250-648, 1250-649, 1250-650, 1250-651, 1250-652, 1250-653, 1250-654, 1250-655, 1250-656, 1250-657, 1250-658, 1250-659, 1250-660, 1250-661, 1250-662, 1250-663, 1250-664, 1250-665, 1250-666, 1250-667, 1250-668, 1250-669, 1250-670, 1250-671, 1250-672, 1250-673, 1250-674, 1250-675, 1250-676, 1250-677, 1250-678, 1250-679, 1250-680, 1250-681, 1250-682, 1250-683, 1250-684, 1250-685, 1250-686, 1250-687, 1250-688, 1250-689, 1250-690, 1250-691, 1250-692, 1250-693, 1250-694, 1250-695, 1250-696, 1250-697, 1250-698, 1250-699, 1250-700, 1250-701, 1250-702, 1250-703, 1250-704, 1250-705, 1250-706, 1250-707, 1250-708, 1250-709, 1250-710, 1250-711, 1250-712, 1250-713, 1250-714, 1250-715, 1250-716, 1250-717, 1250-718, 1250-719, 1250-720, 1250-721, 1250-722, 1250-723, 1250-724, 1250-725, 1250-726, 1250-727, 1250-728, 1250-729, 1250-730, 1250-731, 1250-732, 1250-733, 1250-734, 1250-735, 1250-736, 1250-737, 1250-738, 1250-739, 1250-740, 1250-741, 1250-742, 1250-743, 1250-744, 1250-745, 1250-746, 1250-747, 1250-748, 1250-749, 1250-750, 1250-751, 1250-752, 1250-753, 1250-754, 1250-755, 1250-756, 1250-757, 1250-758, 1250-759, 1250-760, 1250-761, 1250-762, 1250-763, 1250-764, 1250-765, 1250-766, 1250-767, 1250-768, 1250-769, 1250-770, 1250-771, 1250-772, 1250-773, 1250-774, 1250-775, 1250-776, 1250-777, 1250-778, 1250-779, 1250-780, 1250-781, 1250-782, 1250-783, 1250-784, 1250-785, 1250-786, 1250-787, 1250-788, 1250-789, 1250-790, 1250-791, 1250-792, 1250-793, 1250-794, 1250-795, 1250-796, 1250-797, 1250-798, 1250-799, 1250-800, 1250-801, 1250-802, 1250-803, 1250-804, 1250-805, 1250-806, 1250-807, 1250-808, 1250-809, 1250-810, 1250-811, 1250-812, 1250-813, 1250-814, 1250-815, 1250-816, 1250-817, 1250-818, 1250-819, 1250-820, 1250-821, 1250-822, 1250-823, 1250-824, 1250-825, 1250-826, 1250-827, 1250-828, 1250-829, 1250-830, 1250-831, 1250-832, 1250-833, 1250-834, 1250-835, 1250-836, 1250-837, 1250-838, 1250-839, 1250-840, 1250-841, 1250-842, 1250-843, 1250-844, 1250-845, 1250-846, 1250-847, 1250-848, 1250-849, 1250-850, 1250-851, 1250-852, 1250-853, 1250-854, 1250-855, 1250-856, 1250-857, 1250-858, 1250-859, 1250-860, 1250-861, 1250-862, 1250-863, 1250-864, 1250-865, 1250-866, 1250-867, 1250-868, 1250-869, 1250-870, 1250-871, 1250-872, 1250-873, 1250-874, 1250-875, 1250-876, 1250-877, 1250-878, 1250-879, 1250-880, 1250-881, 1250-882, 1250-883, 1250-884, 1250-885, 1250-886, 1250-887, 1250-888, 1250-889, 1250-890, 1250-891, 1250-892, 1250-893, 1250-894, 1250-895, 1250-896, 1250-897, 1250-898, 1250-899, 1250-900, 1250-901, 1250-902, 1250-903, 1250-904, 1250-905, 1250-906, 1250-907, 1250-908, 1250-909, 1250-910, 1250-911, 1250-912, 1250-913, 1250-914, 1250-915, 1250-916, 1250-917, 1250-918, 1250-919, 1250-920, 1250-921, 1250-922, 1250-923, 1250-924, 1250-925, 1250-926, 1250-927, 1250-928, 1250-929, 1250-930, 1250-931, 1250-932, 1250-933, 1250-934, 1250-935, 1250-936, 1250-937, 1250-938, 1250-939, 1250-940, 1250-941, 1250-942, 1250-943, 1250-944, 1250-945, 1250-946, 1250-947, 1250-948, 1250-949, 1250-950, 1250-951, 1250-952, 1250-953, 1250-954, 1250-955, 1250-956, 1250-957, 1250-958, 1250-959, 1250-960, 1250-961, 1250-962, 1250-963, 1250-964, 1250-965, 1250-966, 1250-967, 1250-968, 1250-969, 1250-970, 1250-971, 1250-972, 1250-973, 1250-974, 1250-975, 1250-976, 1250-977, 1250-978, 1250-979, 1250-980, 1250-981, 1250-982, 1250-983, 1250-984, 1250-985, 1250-986, 1250-987, 1250-988, 1250-989, 1250-990, 1250-991, 1250-992, 1250-993, 1250-994, 1250-995, 1250-996, 1250-997, 1250-998, 1250-999, 1250-1000, 1250-1001, 1250-1002, 1250-1003, 1250-1004, 1250-1005, 1250-1006, 1250-1007, 1250-1008, 1250-1009, 1250-1010, 1250-1011, 1250-1012, 1250-1013, 1250-1014, 1250-1015, 1250-1016, 1250-1017, 1250-1018, 1250-1019, 1250-1020, 1250-1021, 1250-1022, 1250-1023, 1250-1024, 1250-1025, 1250-1026, 1250-1027, 1250-1028, 1250-1029, 1250-1030, 1250-1031, 1250-1032, 1250-1033, 1250-1034, 1250-1035, 1250-1036, 1250-1037, 1250-1038, 1250-1039, 1250-1040, 1250-1041, 1250-1042, 1250-1043, 1250-1044, 1250-1045, 1250-1046, 1250-1047, 1250-1048, 1250-1049, 1250-1050, 1250-1051, 1250-1052, 1250-1053, 1250-1054, 1250-1055, 1250-1056, 1250-1057, 1250-1058, 1250-1059, 1250-1060, 1250-1061, 1250-1062, 1250-1063, 1250-1064, 1250-1065, 1250-1066, 1250-1067, 1250-1068, 1250-1069, 1250-1070, 1250-1071, 1250-1072, 1250-1073, 1250-1074, 1250-1075, 1250-1076, 1250-1077, 1250-1078, 1250-1079, 1250-1080, 1250-1081, 1250-1082, 1250-1083, 1250-1084, 1250-1085, 1250-1086, 1250-1087, 1250-1088, 1250-1089, 1250-1090, 1250-1091, 1250-1092, 1250-1093, 1250-1094, 1250-1095, 1250-1096, 1250-1097, 1250-1098, 1250-1099, 1250-1100, 1250-1101, 1250-1102, 1250-1103, 1250-1104, 1250-1105, 1250-1106, 1250-1107, 1250-1108, 1250-1109, 1250-1110, 1250-1111, 12




REV	DESCRIPTION	DATE
G	DEFLECTOR 12470 WAS 18609	02/02/96
H	NEW STICKERS ADDED. 590240-1 WAS 590240. 590160 WAS 590247	05/30/96
J	STROKE LITTER CAL OUT ADDED	09/18/96

## NOTES:

- 1 FOR LONG PINTAIL FASTENERS, USE DEFLECTOR P/N 118809-1 (INCLUDED WITH THIS TOOL)
- 2 STROKE .625 INCHES NOMINAL  
PULL CAPACITY AT  
5400 PSI, 7000 LBS  
PULL CAPACITY AT  
8000 PSI, 10360 LBS
- 3 SERVICE KIT P/N 2502/2503KIT AVAILABLE FOR THIS TOOL
- 4 POLYSEAL INSTALLATION TOOL P/N 505940 AVAILABLE FOR THIS TOOL
- 5 ASSEMBLE AND TEST PER HUCK SPEC 42-500.
6. PRINT THE FOLLOWING VALUES ON STICKER 590351 IN  
INDELUIBLE INK: 8400 PSI, 580 BAR  
CROSS OUT SCFM, L/M, & GPM BLOCKS AS SHOWN

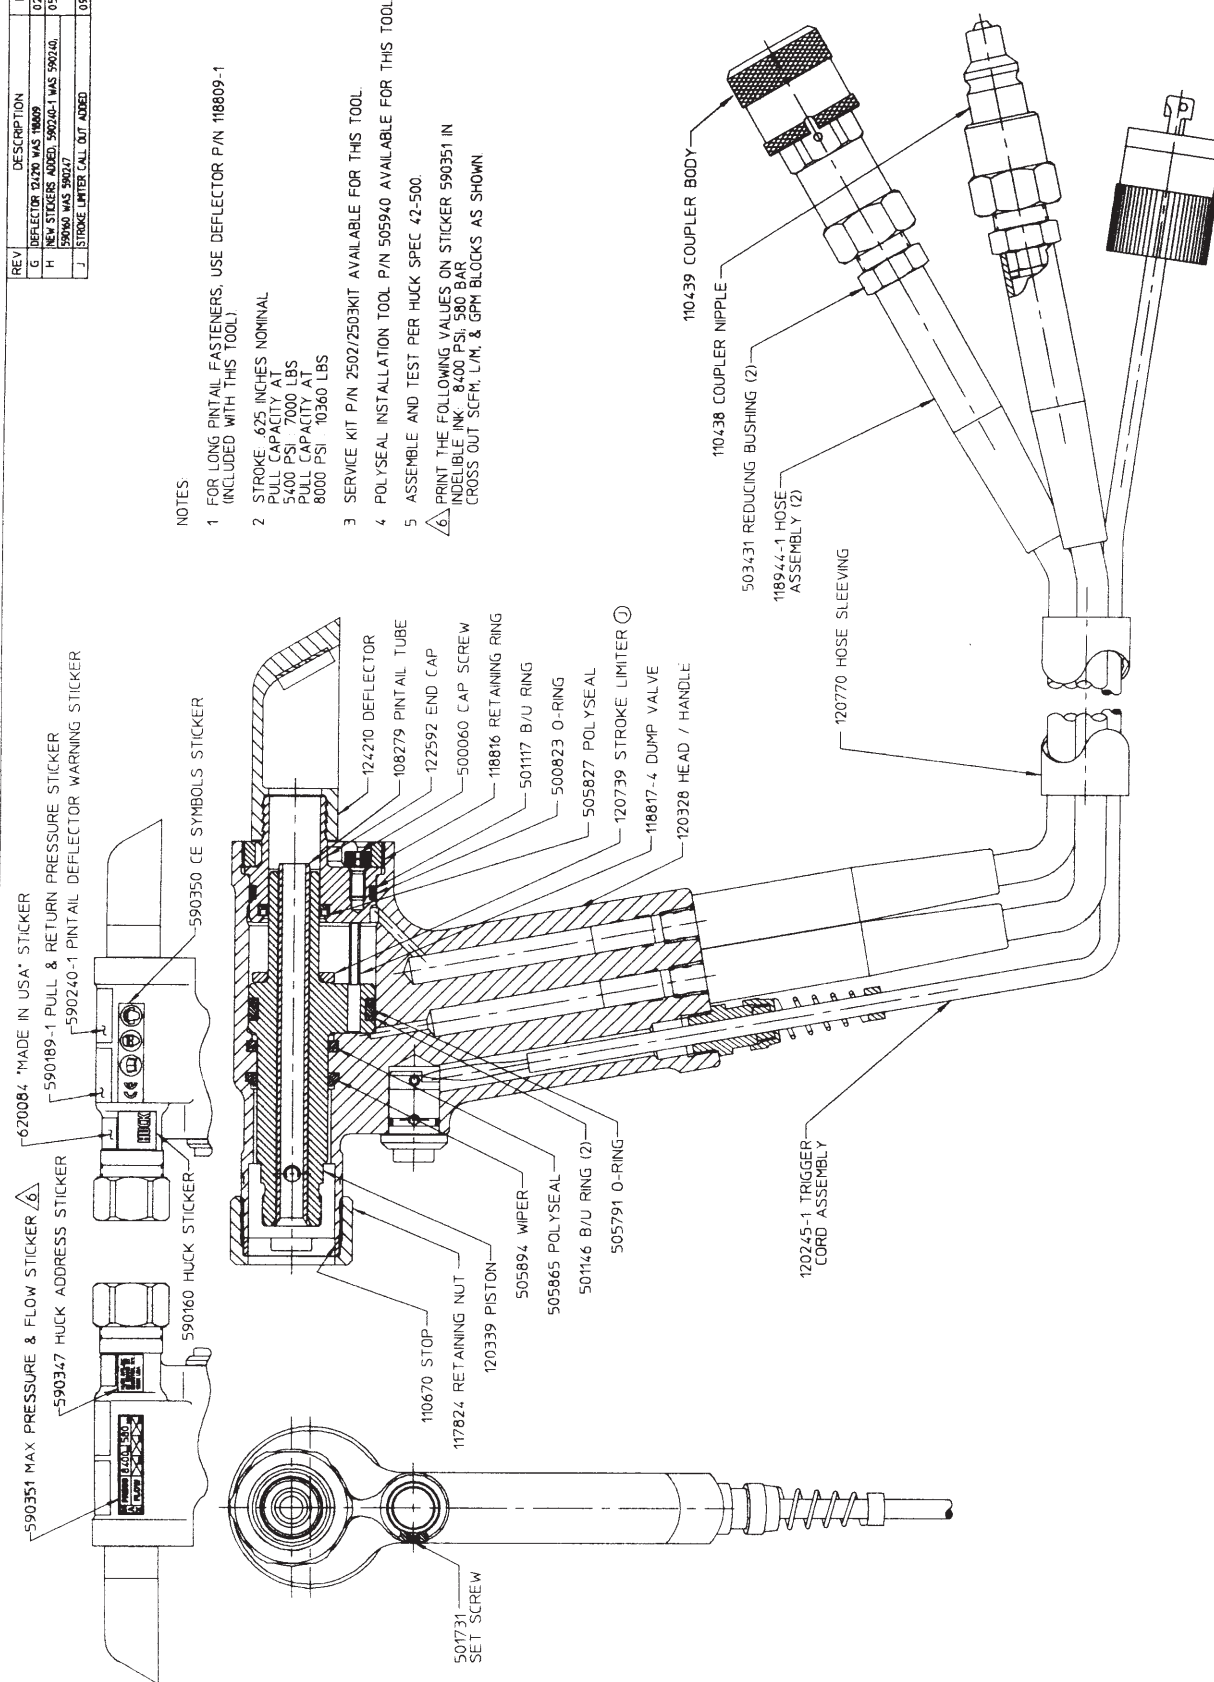[illegible]

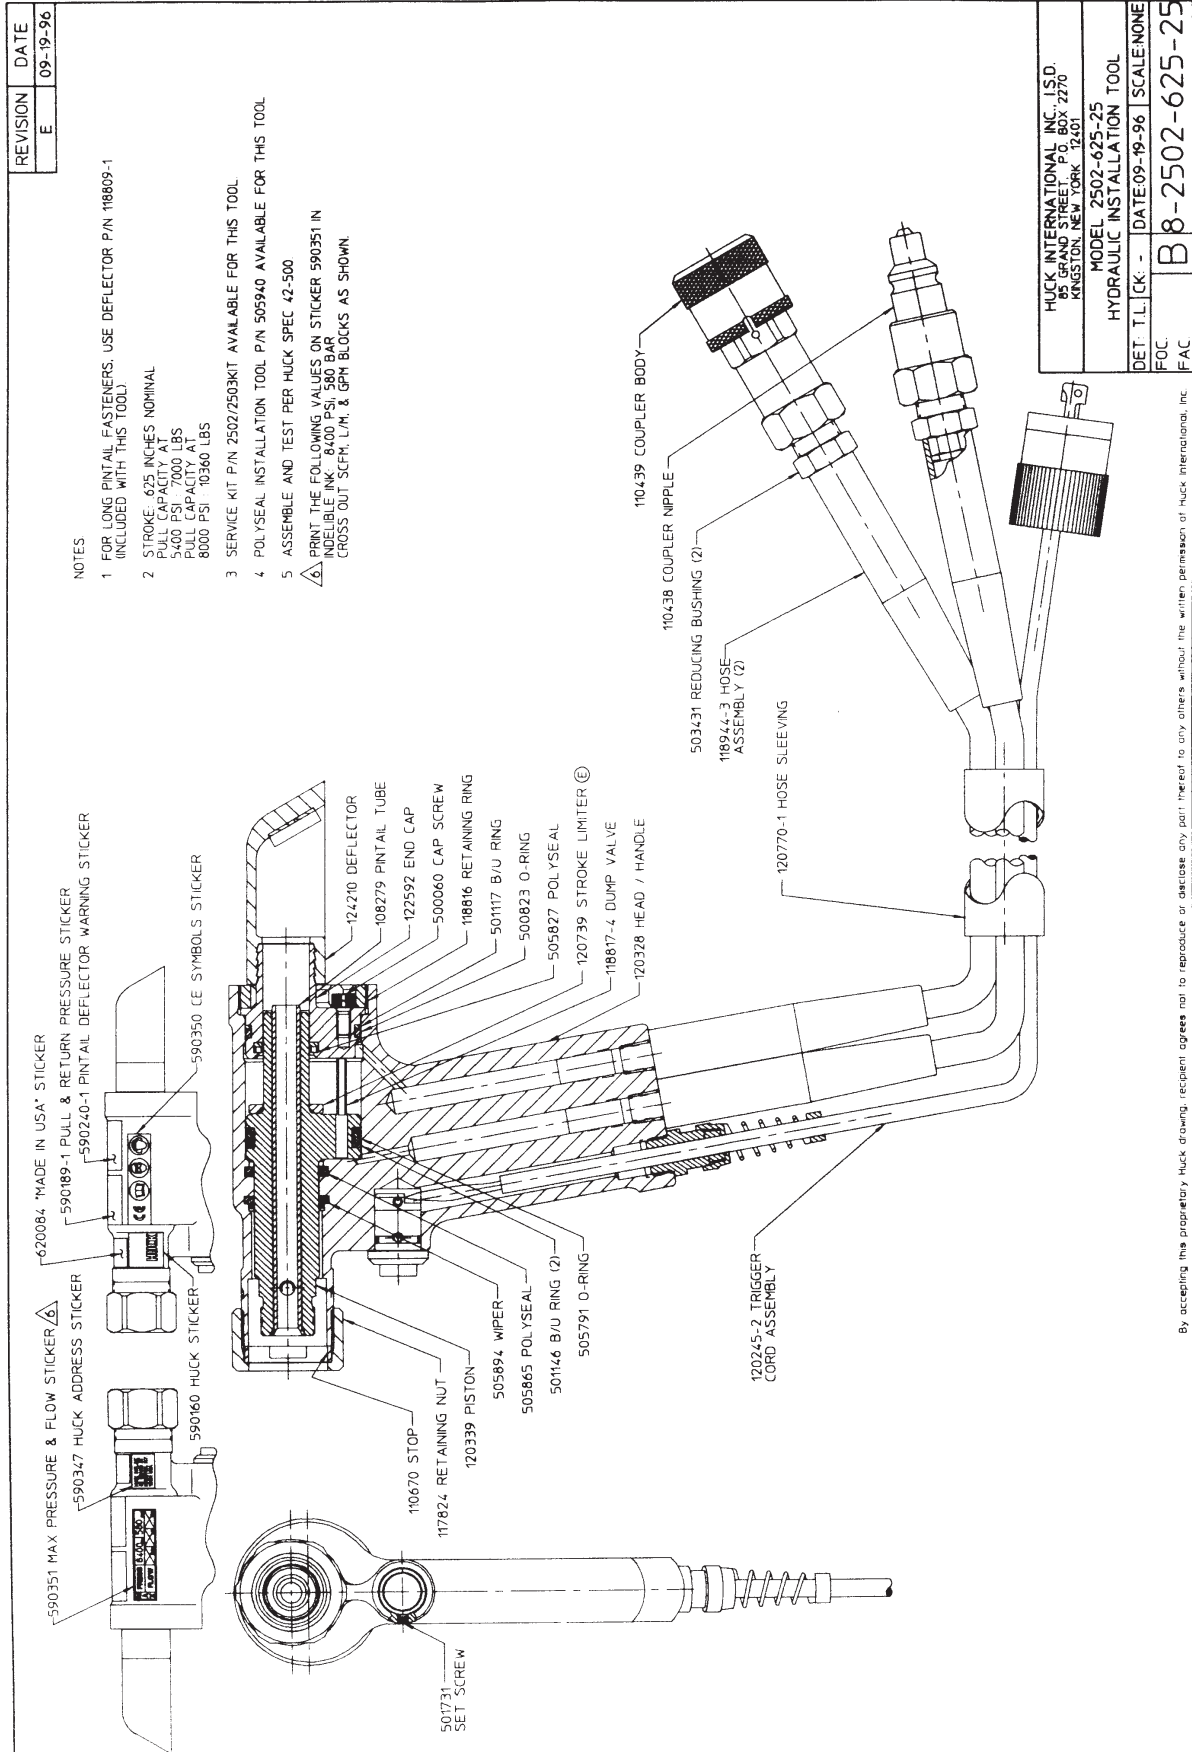

## TABLE 3 - FASTENER SELECTION CHART

A large variety of Nose Assemblies are available for Huck Installation Tools, therefore, please refer to the appropriate Nose Assembly Selection Chart for specific information - sizes installed and clearance dimensions for each specific nose assembly are given.

This list is intended as a general guide to

the types of fasteners available from Huck. It is not all inclusive nor does it imply that the tool covered by this manual will install all types of fasteners.

**REFER TO OTHER AVAILABLE FASTENER and NOSE ASSEMBLY SELECTION CHARTS for ADDITIONAL DATA**

### Fastener Selection List

C6L HUCKBOLT®  
MAGNA-GRIP® HUCKBOLT  
HP8 HUCKBOLT® (1)

NAS SHEAR HUCKBOLT®  
GPL LOCKBOLT® (1)

9SP & MS BLIND RIVET

MAGNA-LOK® BLIND RIVET

Asp® FASTENER

UNIMATIC® BLIND BOLT  
MS2114OU & MS2114OS  
MS21141U & MS21141S  
MS90353U & MS90353S

DOUBLE ACTION BLIND BOLT  
MS90353 & MS90354  
MS21140 & MS21141

OVERSIZE BLIND RIVET  
OSMLSP & OSMLS100

C5OL HUCKBOLT® (1)  
HUCK-FIT™ FASTENER (1)

NAS TENSION HUCK BOLT®  
LGPL LOCKBOLT® (1)

RAK BLIND RIVET®

MAGNA-BULB™ BLIND RIVET

OSR BLIND RIVET

UNIMATIC® BLIND RIVET  
NAS 1919U & NAS 1919S  
NAS 1921U & NAS 1921S  
MS90354U & MS90354S

DOUBLE ACTION BLIND RIVET  
NAS191D & NAS1921

(1) Available in inch & metric sizes



# LIMITED WARRANTIES

**Tooling Warranty:** Huck warrants that tooling and other items (excluding fasteners, and hereinafter referred as "other items") manufactured by Huck shall be free from defects in workmanship and materials for a period of ninety (90) days from the date of original purchase.

**Warranty on "non standard or custom manufactured products":** With regard to non-standard products or custom manufactured products to customer's specifications, Huck warrants for a period of ninety (90) days from the date of purchase that such products shall meet Buyer's specifications, be free of defects in workmanship and materials. Such warranty shall not be effective with respect to non-standard or custom products manufactured using buyer-supplied molds, material, tooling and fixtures that are not in good condition or repair and suitable for their intended purpose.

**THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. HUCK MAKES NO OTHER WARRANTIES AND EXPRESSLY DISCLAIMS ANY OTHER WARRANTIES, INCLUDING IMPLIED WARRANTIES AS TO MERCHANTABILITY OR AS TO THE FITNESS OF THE TOOLING, OTHER ITEMS, NONSTANDARD OR CUSTOM MANUFACTURED PRODUCTS FOR ANY PARTICULAR PURPOSE AND HUCK SHALL NOT BE LIABLE FOR ANY LOSS OR DAMAGE, DIRECTLY OR INDIRECTLY, ARISING FROM THE USE OF SUCH TOOLING, OTHER ITEMS, NONSTANDARD OR CUSTOM MANUFACTURED PRODUCTS OR BREACH OF WARRANTY OR FOR ANY CLAIM FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

Huck's sole liability and Buyer's exclusive remedy for any breach of warranty shall be limited, at Huck's option, to replacement or repair, at FOB Huck's plant, of Huck manufactured tooling, other items, nonstandard or custom products found to be defective in specifications, workmanship and materials not otherwise the direct or indirect cause of Buyer supplied molds, material, tooling or fixtures. Buyer shall give Huck written notice of claims for defects within the ninety (90) day warranty period for tooling, other items, nonstandard or custom products described above and Huck shall inspect products for which such claim is made.

**Tooling, Part(s) and Other Items not manufactured by Huck.**

**HUCK MAKES NO WARRANTY WITH RESPECT TO THE TOOLING, PART(S) OR OTHER ITEMS MANUFACTURED BY THIRD PARTIES. HUCK EXPRESSLY DISCLAIMS ANY WARRANTY EXPRESSED OR IMPLIED, AS TO THE CONDITION, DESIGN, OPERATION, MER-**

**CHANTABILITY OR FITNESS FOR USE OF ANY TOOL, PART(S), OR OTHER ITEMS THEREOF NOT MANUFACTURED BY HUCK. HUCK SHALL NOT BE LIABLE FOR ANY LOSS OR DAMAGE, DIRECTLY OR INDIRECTLY, ARISING FROM THE USE OF SUCH TOOLING, PART(S) OR OTHER ITEMS OR BREACH OF WARRANTY OR FOR ANY CLAIM FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

The only warranties made with respect to such tool, part(s) or other items thereof are those made by the manufacturer thereof and Huck agrees to cooperate with Buyer in enforcing such warranties when such action is necessary.

Huck shall not be liable for any loss or damage resulting from delays or nonfulfillment of orders owing to strikes, fires, accidents, transportation companies or for any reason or reasons beyond the control of the Huck or its suppliers.

## ***Huck Installation Equipment***

Huck International, Inc. reserves the right to make changes in specifications and design and to discontinue models without notice.

Huck Installation Equipment should be serviced by trained service technicians only.

Always give the Serial Number of the equipment when corresponding or ordering service parts.

Complete repair facilities are maintained by Huck International, Inc. Please contact one of the offices listed below.

### Eastern

One Corporate Drive Kingston, New York 12401-0250  
Telephone (845) 331-7300 FAX (845) 334-7333

### Canada

6150 Kennedy Road Unit 10, Mississauga, Ontario, L5T2J4, Canada.  
Telephone (905) 564-4825 FAX (905) 564-1963

### Outside USA and Canada

Contact your nearest Huck International Office, see back cover.

In addition to the above repair facilities, there are Authorized Tool Service Centers (ATSC's) located throughout the United States. These service centers offer repair services, spare parts, Service Parts Kits, Service Tools Kits and Nose Assemblies. Please contact your Huck Representative or the nearest Huck office listed on the back cover for the ATSC in your area.



**For the Long Haul™**

## A Global Organization

*Alcoa Fastening Systems (AFS) maintains company offices throughout the United States and Canada, with subsidiary offices in many other countries. Authorized AFS distributors are also located in many of the world's*

*industrial and Aerospace centers, where they provide a ready source of AFS fasteners, installation tools, tool parts, and application assistance.*

## Alcoa Fastening Systems world-wide locations:

### Americas

#### **Alcoa Fastening Systems**

##### **Aerospace Products**

##### **Tucson Operations**

3724 East Columbia  
Tucson, AZ 85714  
800-234-4825  
520-747-9898  
FAX: 520-748-2142

#### **Alcoa Fastening Systems**

##### **Aerospace Products**

##### **Carson Operations**

PO Box 5268  
900 Watson Center Rd.  
Carson, CA 90749  
800-421-1459  
310-830-8200  
FAX: 310-830-1436

#### **Alcoa Fastening Systems**

##### **Commercial Products**

##### **Waco Operations**

PO Box 8117  
8001 Imperial Drive  
Waco, TX 76714-8117  
800-388-4825  
254-776-2000  
FAX: 254-751-5259

#### **Alcoa Fastening Systems**

##### **Commercial Products**

##### **Kingston Operations**

1 Corporate Drive  
Kingston, NY 12401  
800-431-3091  
845-331-7300  
FAX: 845-334-7333  
www.hucktools.com

#### **Alcoa Fastening Systems**

##### **Commercial Products**

##### **Canada Operations**

6150 Kennedy Road, Unit 10  
Mississauga, Ontario L5T2J4  
Canada  
905-564-4825  
FAX: 905-564-1963

#### **Alcoa Fastening Systems**

##### **Commercial Products**

##### **Latin America Operations**

Avenida Parque Lira. 79-402  
Tacubaya Mexico, D.F.  
C.P. 11850  
FAX: 525-515-1776  
TELEX: 1173530 LUKSME

### Far East

#### **Alcoa Fastening Systems**

##### **Commercial Products**

##### **Australia Operations**

14 Viewtech Place  
Rowville, Victoria  
Australia 3178  
03-764-5500  
Toll Free: 008-335-030  
FAX: 03-764-5510

### Europe

#### **Alcoa Fastening Systems**

##### **Commercial Products**

##### **United Kingdom Operations**

Unit C, Stafford Park 7  
Telford, Shropshire  
England TF3 3BQ  
01952-290011  
FAX: 0952-290459

#### **Alcoa Fastening Systems**

##### **Aerospace Products**

##### **France Operations**

Clos D'Asseville  
BP4  
95450 Us Par Vigny  
France  
33-1-30-27-9500  
FAX: 33-1-34-66-0600



For The Long Haul, The Future of Fastening Technology, The Future of Assembly Technology, The Future of Tooling Technology, and Tools of Productivity are service marks of Huck International. Huck provides technical assistance regarding the use and application of Huck fasteners and tooling.

NOTICE: The information contained in this publication is only for general guidance with regard to properties of the products shown

and/or the means for selecting such products, and is not intended to create any warranty, express, implied, or statutory; all warranties are contained only in Huck's written quotations, acknowledgements, and/or purchase orders. It is recommended that the user secure specific, up-to-date data and information regarding each application and/or use of such products.

HWB898 1003-5M

# Alcoa Fastening Systems



*One Great Connection<sup>SM</sup>*